



SureBuilt

Concrete Forms & Accessories

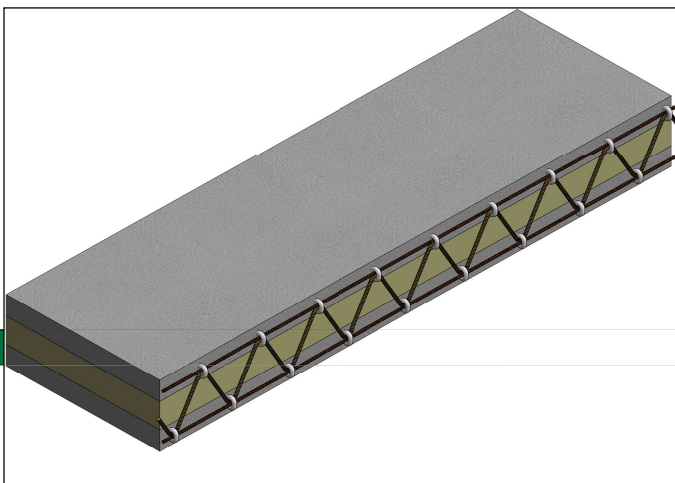

Tilt-Up Forming and Accessories

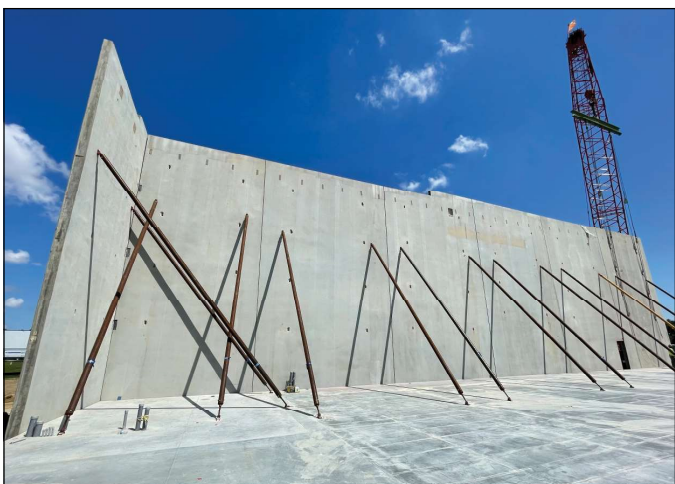

Safety Information

Read, understand and follow the information in this publication before using any SureBuilt tilt-up products and accessories. When in doubt about the proper use or installation of any SureBuilt product, immediately contact the nearest SureBuilt branch for clarification.

SureBuilt products are intended for use by trained, qualified and experienced users only. Misuse or lack of supervision and/or inspection can contribute to serious accidents or deaths. Any application other than those shown in this publication should be carefully tested and supervised before use.

The user of SureBuilt products must evaluate the application, determine the safe working load and control all field conditions to prevent load in excess of product(s) capacity. Safety factors shown in this publication are approximate minimum values. The data used to develop safe working loads for products is a combination of actual testing and/or other industry sources. Do not exceed the recommended safe working loads.

Worn Parts

For safety, tilt-up products and accessories must be properly used and maintained. Products may be subject to wear, overloading, corrosion, deformation, alteration and other factors that may affect performance. It is the responsibility of the user to schedule regular inspections and remove worn and damaged parts from service.

Field Modification

Field welding can compromise product performance, alter load capacities, and create hazardous situations. Consult with a local welding supply dealer to determine appropriate welding procedures. Do not weld any casting unless approved by a licensed metallurgical engineer. Since SureBuilt can not control workmanship or site conditions, SureBuilt can not be responsible for any product alterations or field modifications.

Interchangeability

Tilt-up products manufactured and supplied by SureBuilt are designed as a system. When used properly, SureBuilt products have proven to be among the best designed and safest in the industry. SureBuilt strongly discourages efforts to interchange products supplied by other manufacturers because it may diminish performance and safety of the system.

Design Changes

SureBuilt reserves the right to change product designs, specifications, capacities and/or dimensions at any time and without prior notice.

Safety Factors

Safety factors established by the Occupational Safety and Health Administration (OSHA), Act Part 1910 and American National Standards Institute (ANSI 10.9) are recommended. Contact SureBuilt Engineering for questions or concerns regarding unforeseen site conditions. Safety factors should be adjusted when different or unusual conditions are known to exist.

Industry Recommendation	
Safety Factor*	Intended Application
1.67 to 1 **	Wall Braces
2 to 1	Brace Inserts
2 to 1	Lifting Inserts (single use)
3 to 1	Permanent panel connections
4 to 1	Panel handling (multiple lifts)
5 to 1	Lifting/Reusable Hardware

* Minimum requirement.

** Assumes ASD loads.

Table of Contents

Ring-Lift System	4
Ring Clutch	6
Rigging Configurations	7
SureLift (SL) Insert	8
ProLift (PRO) Insert	10
Straight Leg Erection Anchor	12
Lifting System	14
Strongbacks	16
Brace Insert	18
Pipe Braces	20
Modular Braces	26
HGA Bracket	29
Helical Ground Anchor	30
Titen HD Screw Anchor	32
Taper Bolt and Expander Nut	33
Panel Base Connector	34
Slant Anchor	36
Edge Connector	37
Edge Form Brackets	38
Adhesives	38
Profiles	39
Bar Support	40
Slab Bolster, Patch Cap and Shims	40
Slab Edge Protector	42
Truss	43
Brace Spacing Bid Guidelines	44
Bracing Guidelines	45
Coatings and Finishes	46
Warnings	47

Product specifications subject to change without notice.

Ring-Lift System


SureBuilt has combined the best in design and manufacturing, with extensive industry experience, to create an effective, efficient and safe tilt-up system.

The Ring-Lift System is designed for tilt-up loads up to 22,000 lbs. System components are routinely sampled and tested for specification conformance and product performance.

Ring Clutch

The Ring Clutch connects the tilt-up insert to crane rigging and lifts the concrete panel from the casting surface. The “ring” shape hooks securely onto the loop of the insert for lifting and handling.

The design of the Ring Clutch discharges the lateral forces of angular lifting directly into the tilt-up panel. Once lifted and braced in position, the Ring Clutch can be safely released from the ground.

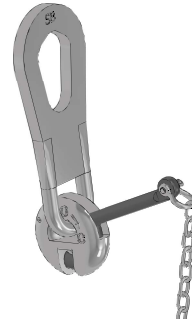


Ring Clutch


Inserts

The SureLift (SL) Insert has double bend legs, non-rusting plastic feet and a disposable void former with locator antenna. The insert and rebar design determine the lifting requirements.

The ProLift (PRO) Insert is another type of insert with higher capacity. The non-rusting, star-shaped feet can be removed and rotated to provide 1/4” height adjustment.

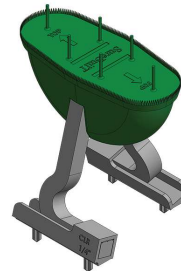

SureLift (SL) Insert

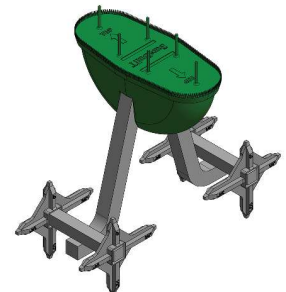


ProLift (PRO) Insert


Brace Insert

The Brace Insert provides an attachment point for the Strongbacks and Pipe Braces used during tilt-up lifting, handling and bracing.

A Double Brace Insert is also available to accurately position inserts for larger size panels, with greater loads, requiring multiple Pipe Braces.

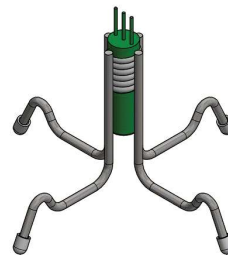

Brace Insert

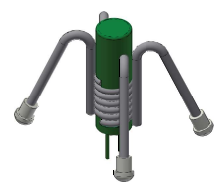

*Inverted
Brace Insert*

Insert Placement

The insert is designed and manufactured to create an effective, efficient and safe tilt-up system. These inserts are routinely sampled and tested for product performance. Tests confirm these inserts meet or exceed industry safety specifications.

The insert legs and rebar design form the tilt-up panel shear cone. This is an angle of approximately 35° in relation to the longitudinal axis of the insert.

Attaching the Ring Clutch

The user must conduct a visual inspection to detect any possible damage or defects in the Ring Clutch before use. The ring-shape of the Ring Clutch hooks onto the loop of the insert for lifting.

Move the handle to “open” the Ring Clutch ring, position the Ring Clutch over the insert and move the handle to “close” the ring.

Engaging the Ring Clutch

Position the handle of the Ring Clutch between the rigging and the top of the panel. The handle should be positioned against the concrete surface during lifting and handling.

The chain attachment should pass through the bail opening, then be connected to a line for a safe ground release.


Preparing for Panel Lift

The user must conduct a visual inspection to detect any possible damage or defects in the Ring Clutch.


The user must verify the crane rigging, capacity and positioning are adequate for the lifting sequence. Angular lifting increase the forces must be taken into account.

The handle should remain against the concrete surface during lifting and handling. All nonessential personnel should remain at a distance as a safety precaution.


Emergency Lifting Plate may need to be used if anchor has sunk or shifted when the panel was poured.

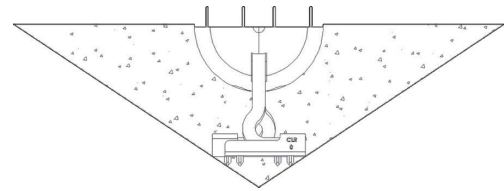


Insert Placement (rebar not shown)

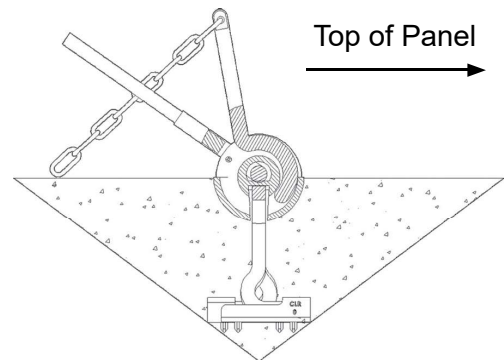

Attaching the Ring Clutch

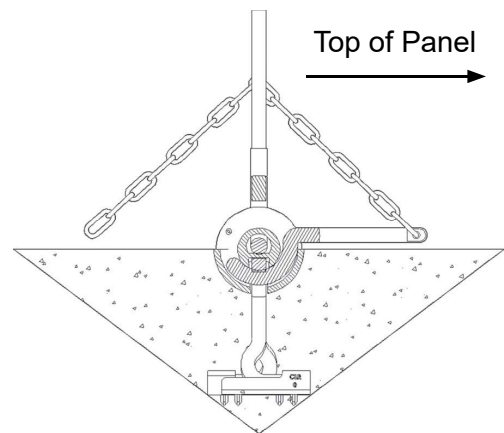

Engaging the Ring Clutch

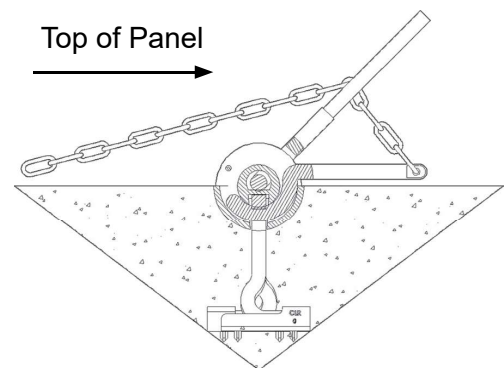

Preparing for Panel Lift


Ring Clutch

The Ring Clutch connects the tilt-up insert to crane rigging for lifting the concrete panel from the casting surface. The “ring” shape hooks securely onto the loop of the insert for lifting and handling.

The design of the Ring Clutch discharges the lateral forces of angular lifting directly into the tilt-up panel. Once lifted and braced in position, the Ring Clutch can be safely released from the ground.

All erection calculations should be performed under the direct supervision of and reviewed by a Professional Engineer.


Ring Clutches must be maintained regularly. A maintenance program is available.

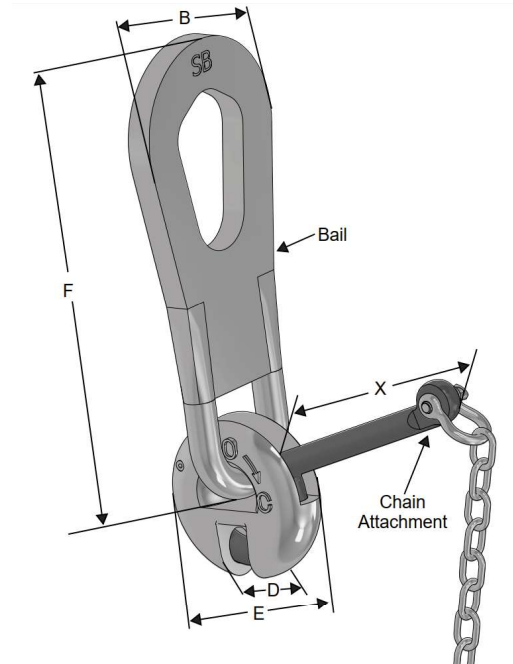


Ring Clutch							
Part No.	Description	SWL*	B (in.)	D (in.)	E (in.)	F (in.)	X (in.)
SBRL22KP10T	Ring Clutch	22,000 lbs	4.75	2.38	5.00	10.25	7.50

* Safe Working Load (SWL) based on 5:1 safety factor.


Rigging

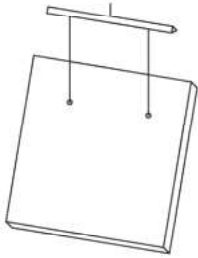


1-2

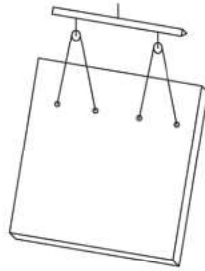


1-4

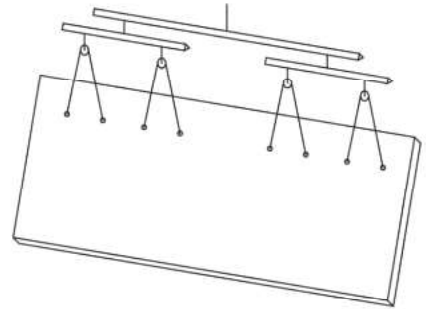


1-8

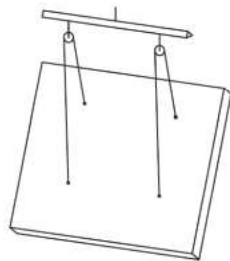


2-2

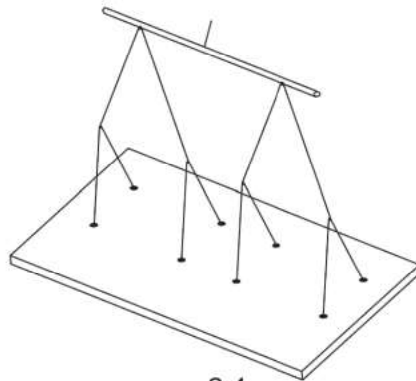


2-4

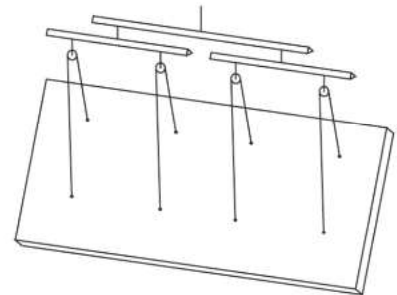


2-4

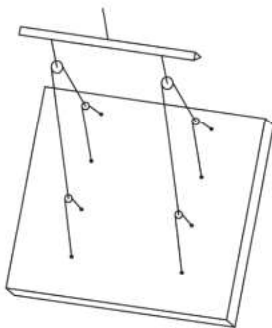

4-2

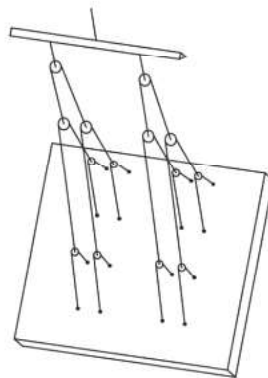

4-4

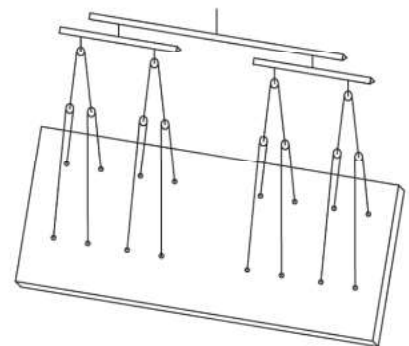


2-8

Insert positions and rigging must be provided by an experienced tilt-up professional.


SureLift (SL) Insert

The SureLift Insert is designed for lifting tilt-up panels. The insert develops high pull-out strength for every panel thickness up to 12" (see table).


The integrated plastic former has antennae to identify the insert location and lid to keep concrete out of the lifting recess. The slide-on plastic feet, available for +1/4", +1/2" or +3/4" adjustment, keep the steel insert feet away from the panel face to prevent corrosion.

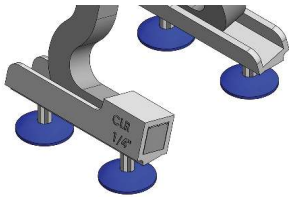

Optional plastic feet are used for positioning the SL insert on rigid foam for insulated panels.

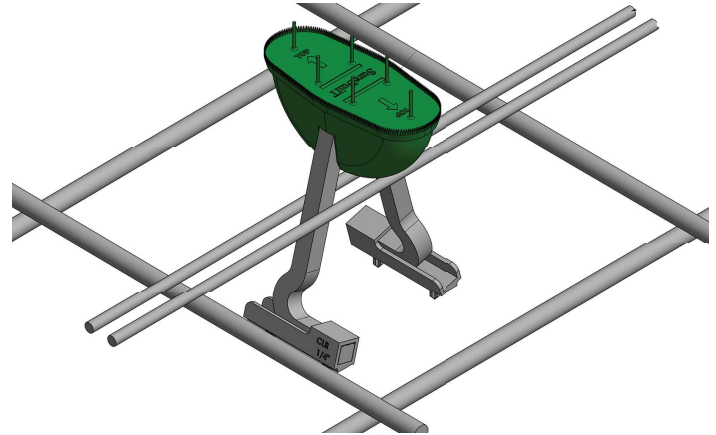

Typical placement to prevent SL Insert from moving. Tie all rebar so installation is secure.

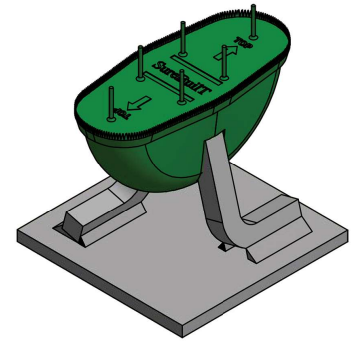

SureLift Insert with Plate (Insulated Panels)

When the structural thickness of an insulated panel is less than 6", a SureLift Insert with an integrated steel plate may be needed. The plate and weld attachment compensate for the smaller height of the insert.

The inserts should always be positioned and tied to rebar so the placement remains secure.

SureLift (SL) Insert with Plate (Insulated Panels)				
Part No.	Description	Structural Thickness	2.5:1 SWL* (Tension lbs)	2:1 SWL* (Shear lbs)
SBRL22SLP5	SL Insert 5" wPlate	5"	7,800	12,800
SBRL22SLP512	SL Insert 5-1/2" wPlate	5-1/2"	7,800	13,700


* Safe Working Load (SWL) is based on testing in 3,000 psi concrete.

SureLift (SL) Insert				
Part No.	Description	Structural Thickness	2.5:1 SWL* (Tension lbs)	2:1 SWL* (Shear lbs)
SBRL22SL5	SL Insert 5"	5"	5,200	7,300
SBRL22SL6	SL Insert 6"	6"	10,450	14,800
SBRL22SL634	SL Insert 6-3/4"	6-3/4"	10,450	14,800
SBRL22SL7	SL Insert 7"	7"	13,500	19,000
SBRL22SL714	SL Insert 7-1/4"	7-1/4"	13,500	19,000
SBRL22SL712	SL Insert 7-1/2"	7-1/2"	13,500	19,000
SBRL22SL734	SL Insert 7-3/4"	7-3/4"	13,500	19,000
SBRL22SL8	SL Insert 8"	8"	15,500	21,900
SBRL22SL812	SL Insert 8-1/2"	8-1/2"	15,500	21,900
SBRL22SL9	SL Insert 9"	9"	18,350	22,000
SBRL22SL914	SL Insert 9-1/4"	9-1/4"	18,350	22,000
SBRL22SL934	SL Insert 9-3/4"	9-3/4"	18,350	22,000
SBRL22SL10	SL Insert 10"	10"	20,550	22,000
SBRL22SL11	SL Insert 11"	11"	22,000	22,000
SBRL22SL12	SL Insert 12"	12"	22,000	22,000
SBIF	Insulation Foot	--	--	--


* Safe Working Load (SWL) based on testing in 3,000 psi concrete.

Double SureLift (SL) Insert

The capacity of the SureLift Insert is increased by using two inserts in combination. The two inserts, joined with a steel Spacer Strap, develop an even higher pull-out strength for every panel thickness up to 12" (see table).

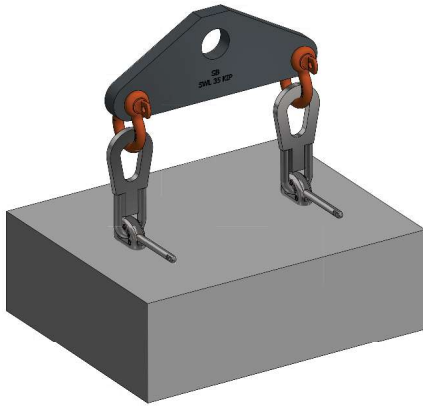

Spreader Beam is used with double inserts and two Lifting Clutches for heavier panels.

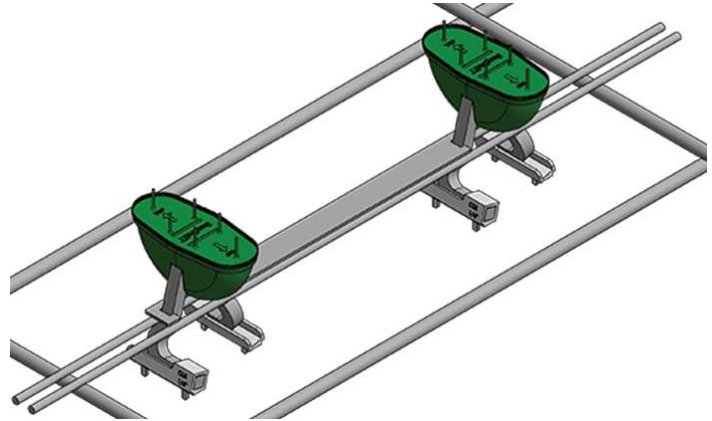

The Double Insert is properly positioned at 18" OC with a Spacer Strap, then tied into the panel rebar.



Spacer Strap (18" OC)

Double SureLift (SL) Insert* (18" OC) with Spacer Strap				
Part No.	Description	Structural Thickness	2.5:1 SWL** (Tension lbs)	2:1 SWL** (Shear lbs)
SBRL22SL6D	Double SL Insert 6"	6"	20,900	29,550
SBRL22SL634D	Double SL Insert 6-3/4"	6-3/4"	20,900	29,550
SBRL22SL7D	Double SL Insert 7"	7"	26,900	32,000
SBRL22SL714D	Double SL Insert 7-1/4"	7-1/4"	26,900	32,000
SBRL22SL712D	Double SL Insert 7-1/2"	7-1/2"	26,900	32,000
SBRL22SL734D	Double SL Insert 7-3/4"	7-3/4"	26,900	32,000
SBRL22SL8D	Double SL Insert 8"	8"	30,950	32,000
SBRL22SL812D	Double SL Insert 8-1/2"	8-1/2"	30,950	32,000
SBRL22SL9D	Double SL Insert 9"	9"	32,000	32,000
SBRL22SL914D	Double SL Insert 9-1/4"	9-1/4"	32,000	32,000
SBRL22SL934D	Double SL Insert 9-3/4"	9-3/4"	32,000	32,000
SBRL22SL10D	Double SL Insert 10"	10"	32,000	32,000
SBRL22SL11D	Double SL Insert 11"	11"	32,000	32,000
SBRL22SL12D	Double SL Insert 12"	12"	32,000	32,000
SBRL22SS18	Spacer Strap 18" OC	--	--	--


* Double SureLift Insert is two inserts (18" OC) connected with Spacer Strap.

** Safe Working Load (SWL) based on testing in 3,000 psi concrete.


ProLift (PRO) Insert

The ProLift Insert is designed for lifting tilt-up panels. The insert develops high pull-out strength with the additional base crossbars.

The integrated plastic former has antennae to identify the insert location and lid to keep concrete out of the lifting recess. The star-shaped plastic feet, rotated for +1/4", +1/2" or +3/4" adjustment, keep the steel insert feet away from the panel face to prevent corrosion.

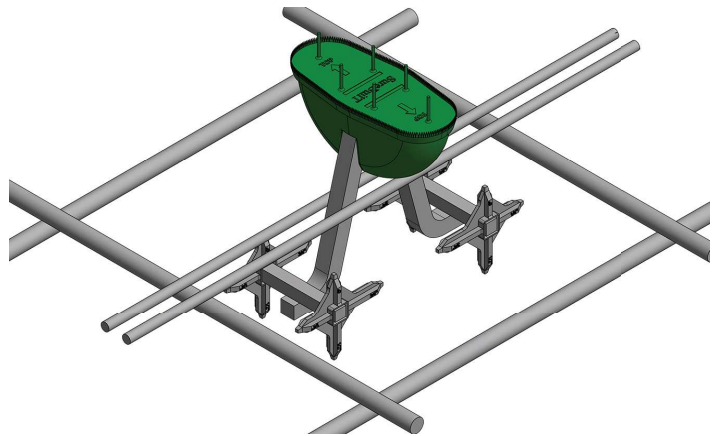

Typical placement to prevent PRO Insert from moving. Tie all rebar so installation is secure.

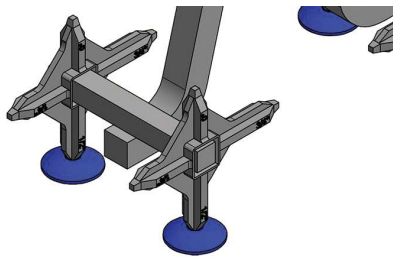


Optional plastic feet are used for positioning the PRO insert on rigid foam for insulated panels.

ProLift (PRO) Insert				
Part No.	Description	Structural Thickness	2.5:1 SWL* (Tension lbs)	2:1 SWL* (Shear lbs)
SBRL22PRO6	PRO Insert 6"	6"	14,300	19,500
SBRL22PRO634	PRO Insert 6-3/4"	6-3/4"	14,300	19,500
SBRL22PRO7	PRO Insert 7"	7"	17,350	22,000
SBRL22PRO714	PRO Insert 7-1/4"	7-1/4"	17,350	22,000
SBRL22PRO712	PRO Insert 7-1/2"	7-1/2"	17,350	22,000
SBRL22PRO734	PRO Insert 7-3/4"	7-3/4"	17,350	22,000
SBRL22PRO8	PRO Insert 8"	8"	19,000	22,000
SBRL22PRO812	PRO Insert 8-1/2"	8-1/2"	19,000	22,000
SBRL22PRO9	PRO Insert 9"	9"	22,000	22,000
SBRL22PRO914	PRO Insert 9-1/4"	9-1/4"	22,000	22,000
SBRL22PRO934	PRO Insert 9-3/4"	9-3/4"	22,000	22,000
SBRL22PRO10	PRO Insert 10"	10"	22,000	22,000
SBRL22PRO11	PRO Insert 11"	11"	22,000	22,000
SBRL22PRO12	PRO Insert 12"	12"	22,000	22,000
SBIF	Insulation Foot	--	--	--


* Safe Working Load (SWL) based on testing in 3,000 psi concrete.

Double ProLift (PRO) Insert

The capacity of the ProLift Insert is increased by using two inserts in combination. The two inserts, joined with a steel Spacer Strap, develop an even higher pull-out strength for every panel thickness up to 12" (see table).

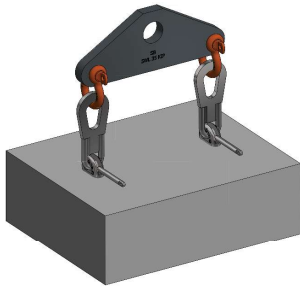

Spreader Beam is used with double inserts and two Lifting Clutches for heavier panels.

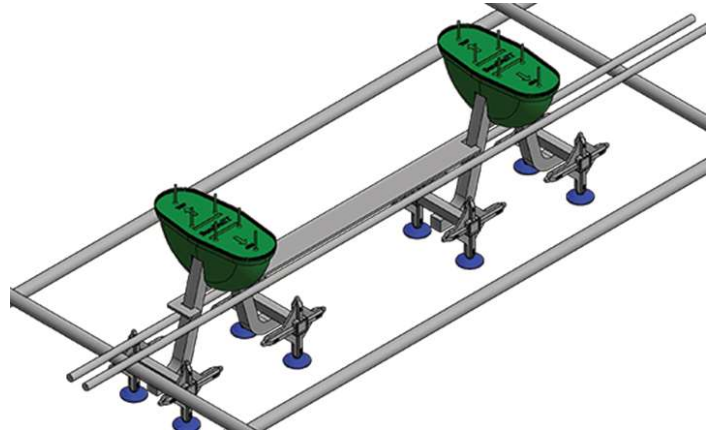

The Double Insert is properly positioned at 18" OC with a Spacer Strap, then tied into the panel rebar.



Spacer Strap (18" OC)

Double ProLift (PRO) Insert* (18" OC) with Spacer Strap				
Part No.	Description	Structural Thickness	2.5:1 SWL** (Tension lbs)	2:1 SWL** (Shear lbs)
SBRL22PRO6D	Double PRO Insert 6"	6"	22,000	30,000
SBRL22PRO634D	Double PRO Insert 6-3/4"	6-3/4"	22,000	30,000
SBRL22PRO7D	Double PRO Insert 7"	7"	27,000	33,000
SBRL22PRO714D	Double PRO Insert 7-1/4"	7-1/4"	28,000	33,000
SBRL22PRO712D	Double PRO Insert 7-1/2"	7-1/2"	28,000	33,000
SBRL22PRO734D	Double PRO Insert 7-3/4"	7-3/4"	28,000	33,000
SBRL22PRO8D	Double PRO Insert 8"	8"	32,000	33,000
SBRL22PRO812D	Double PRO Insert 8-1/2"	8-1/2"	32,000	33,000
SBRL22PRO9D	Double PRO Insert 9"	9"	33,000	33,000
SBRL22PRO914D	Double PRO Insert 9-1/4"	9-1/4"	33,000	33,000
SBRL22PRO934D	Double PRO Insert 9-3/4"	9-3/4"	33,000	33,000
SBRL22PRO10D	Double PRO Insert 10"	10"	33,000	33,000
SBRL22PRO11D	Double PRO Insert 11"	11"	33,000	33,000
SBRL22PRO12D	Double PRO Insert 12"	12"	33,000	33,000
SBRL22SS18	Spacer Strap 18" OC	--	--	--

* Double SureLift Insert is two inserts (18" OC) connected with Spacer Strap.

** Safe Working Load (SWL) based on testing in 3,000 psi concrete.

Straight Leg Erection Anchor


Lifting tilt-up panels from the edge is simple and safe with the Straight Leg Erection Anchor. This anchor is ideal for horizontal-to-vertical edge lifts and shear rotation of thin-wall panels.

The body of the Straight Erection Anchor is shaped to integrate with the panel reinforcement. The addition of a shear plate to the anchor design eliminates the need for a shear bar, making it easier to install.

Two steel “ears” at the top of the anchor “hug” either side of the Ring Clutch, restricting rotation during lateral pulls. Any lateral forces are directed into the anchor to prevent edge spalling.

A Disposable Void Former snaps over the top of the Straight Leg Erection Anchor. This removable and disposable plastic former keeps the lifting point identifiable and accessible after concrete placement is complete.

Though the anchor has an integrated shear plate to simplify installation, there are times when a Tension Bar may be added to maximize load capacity.

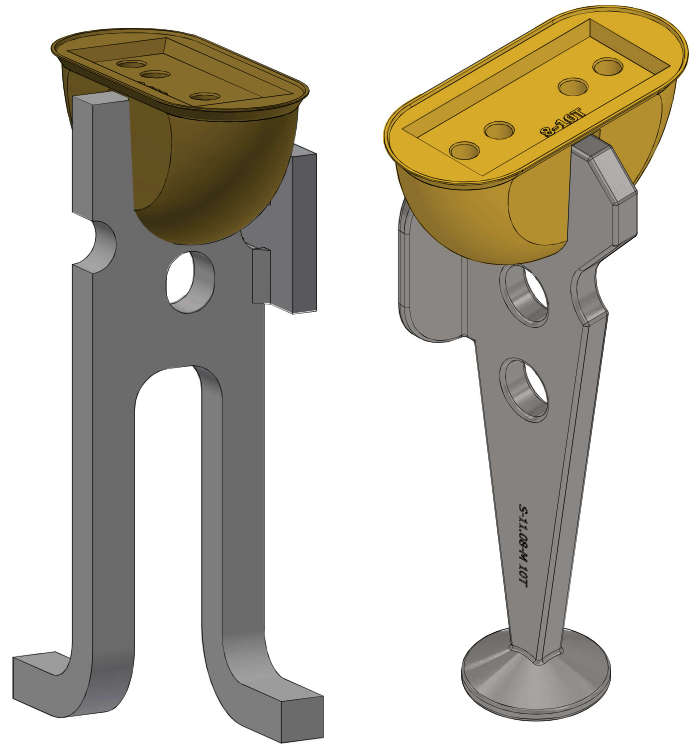

Straight Leg Erection Anchor*

Part No.	Description/Capacity	Clutch ID	Width	Length	Thickness
SBSLE4TSPG	Straight Leg Erection Anchor 4T	4-5T	3-1/16"	10-1/2"	5/8"
SBSLE8TSPGN	Straight Leg Anchor 8T - Narrow	8-10T	3-1/2"	13"	3/4"
SBSLE8TSPG	Straight Leg Erection Anchor 8T	8-10T	4"	13"	3/4"

* Panels less than 6" thick require 4T Straight Leg Erection Anchor.

Disposable Former


Part No.	Description	Clutch ID
SBRLDF5T	Disposable Former 5T (Orange)	4-5T
SBRLDF8T	SB Disposable Former 8T (Blue)	8-10T



Tension Bar (shown with anchor)

Part No.	Description	Rebar	Length*
SBTB4T	Tension Bar 4-5T	#5	54"
SBTB8T	Tension Bar 8-10T	#6	66"

* Minimum total length, including bend, to develop full strength of anchor.

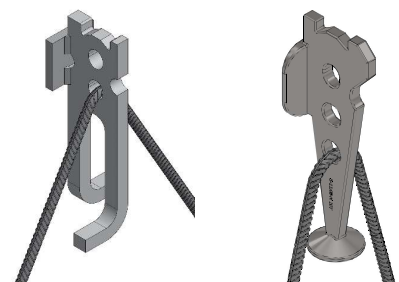

Straight Leg Erection Anchor* (with no Shear Bar)					
Capacity (tons)	Clutch ID marking	Panel Thickness**	Shear***	Tension w/o Tension Bar****	Tension with Tension Bar*****
4T	4-5T	5"	3,450 lbs	3,600 lbs	8,000 lbs
4T	4-5T	5-1/2"	4,200 lbs	4,800 lbs	8,000 lbs
8T	8-10T	6"	4,600 lbs	8,500 lbs	22,000 lbs
8T	8-10T	6-1/2"	5,000 lbs	11,000 lbs	22,000 lbs
8T	8-10T	7"	5,400 lbs	16,500 lbs	22,000 lbs
8T	8-10T	7-1/2"	5,684 lbs	20,000 lbs	22,000 lbs
8T	8-10T	8"	5,958 lbs	22,000 lbs	22,000 lbs
8T	8-10T	9"	6,589 lbs	22,000 lbs	22,000 lbs
8T	8-10T	10"	7,041 lbs	22,000 lbs	22,000 lbs
8T	8-10T	11"	7,448 lbs	22,000 lbs	22,000 lbs
8T	8-10T	12"	7,853 lbs	22,000 lbs	22,000 lbs


* Minimum distance to panel corners is 24", minimum distance between inserts is 24".

** Anchor must be centered within panel thickness, panels less than 6" thick require 4T anchor.


*** 2.5:1 safety factor in 3,000 psi concrete.

**** 2:1 safety factor in 3,000 psi concrete.

***** The 4T requires minimum 54" #5 Tension Bar, 8T requires minimum 66" #6 Tension Bar.

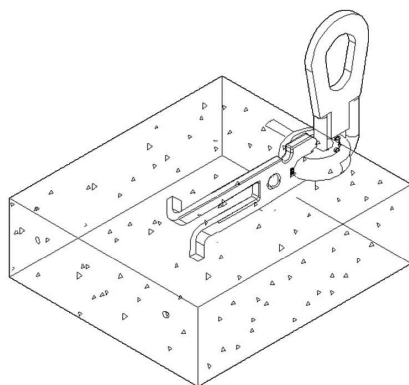

*Straight Leg Erection Anchor
with chair support and
no Tension Bar*

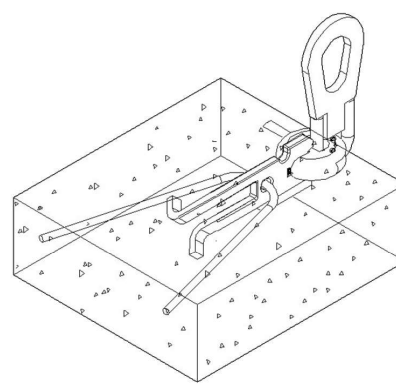


*Straight Leg Erection Anchor
with chair support and
Tension Bar at 30° spread*

Lifting System

The lifting system consists of two inserts, two Ring Clutches and a Spreader Beam with two 10 ton shackles.

To develop the safe working load, inserts must be properly positioned within the panel dimension. Single inserts must be accurately spaced 18" on-center or a double insert must be the used. Improper positioning or inaccurate spacing will affect and reduce the lifting capacity.

The Double Insert (SL or PRO) is a fixed position assembly that simplifies the panel installation and matches the Spreader Beam spacing.

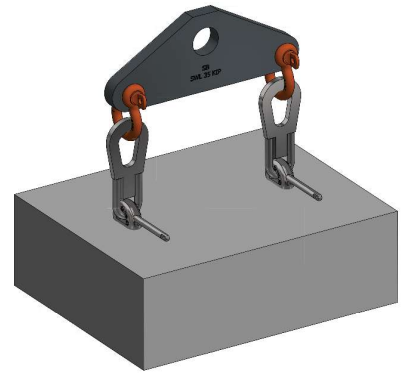

Spreader Beam is used with double inserts and two Ring Clutches for heavier panels.

Spreader Beam with Twin Shackles

The Spreader Beam is designed with two 10 ton shackles and must be used with two ground release Ring Clutches. This will eliminate many of the rigging challenges for very large or heavy tilt-up panels.

The large center hole in the Spreader Beam will accept the many different sizes of shackles used by tilt-up panel erectors.

Double Insert Spreader Beam		
Part No.	Description	SWL*
SBDISB18	Double Insert Spreader Beam	35,000 lbs

* Safe Working Load (SWL) based on 5:1 safety factor.



*18" shackle spacing
Double Insert Spreader Beam*


Emergency Lifting Plate

The Emergency Lift Plate is designed for situations when the original insert is improperly located or unusable. The plate is attached to the tilt-up panel using Titen HD Anchors 3/4"x6" (recommended) or equivalent. Refer to manufacturer instructions and load chart for proper anchor installation and capacity.



The Emergency Lift Plate should be installed over the original insert location or in alternate position designated by an experienced tilt-up professional. If uncertain about the location, contact the lift/brace engineer for further recommendations. Always be certain the Emergency Lift Plate is aligned with crane rigging cables. Plate connects to rigging with a 10 ton shackle.

The Emergency Lift Plate has a maximum safe working load (SWL) of 22,000 lbs. (at 5:1 safety factor) and should never be used in excess of that capacity.

When drilling holes for anchors, be careful not to inadvertently damage structural rebar in the tilt-up panel. Only the Engineer of Record (EOR) can approve deviations in the rebar design or integrity. Contact the lift/brace engineer if additional reinforcing or another configuration is needed for lifting purposes.

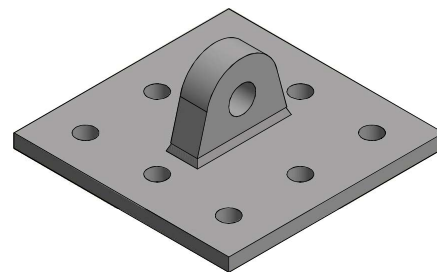

Emergency Lifting Plate

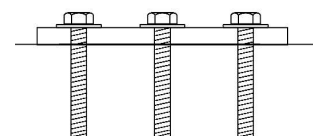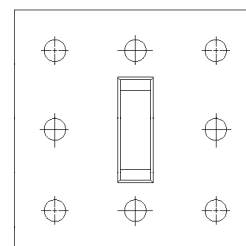

Emergency Lift Plate

*with recommended
Titen HD Anchor 3/4" X 6"
Safe working load is 6,845 lbs
(2:1 safety factor)*

Emergency Lifting Plate		
Part No.	Description	SWL*
SBELP	Emergency Lifting Plate 12"x12"	22,000 lbs

* Safe Working Load (SWL) based on 5:1 safety factor.

Warning:

1. Concrete must have a minimum of 3,000 psi compressive strength.
2. Do not use the Titen HD Anchor in tilt-up panels thinner than 7".
3. Edge distance should be a minimum of 12" to center of holes.
4. Do not reuse Titen HD Anchor bolts.

Installation:

1. Drill holes at 90 degree angle to the panel surface using a 3/4" diameter carbide-tipped drill bit.
2. Drill a minimum of 5-3/4" deep for 6" anchor into the panel. Use the Emergency Lift Plate as a template.
3. Clean the drilled holes with compressed air or blow-out bulb.
4. Only use new Anchors with clean and undamaged threads.
5. Place Emergency Lift Plate over the holes and position Anchors.
6. Securely tighten the anchor using a 3/4" impact wrench to a minimum of 100 ft-lbs torque.
7. Use 3/4" F436 Structural Washer where needed.

Strongback


Strongbacks consist of back-to-back steel channels that are spliced together with butt plates and 3/4" bolts to create the required length.

Strongbacks are used to reinforce critical areas of panels during erection. Assembled strongbacks provide an open channel over the entire length for bolting to panel inserts.


Panels with door and window openings may require strongbacks for temporary support during erection. As a guideline, when any concrete dimension is less than 2 feet wide or any panel thickness is less than 7", strongbacks are recommended.

Strongbacks can be placed near or over panel openings to prevent "hinge" cracking during lifting. The panel engineering company must advise on inserts, spacing and waler length.

Strongbacks are temporarily bolted to each insert with a coil rod, washer and nut. The coil rod is placed between the back-to-back channels with the washer bearing on the waler. When bolted the strongback reinforces the panel for handling.

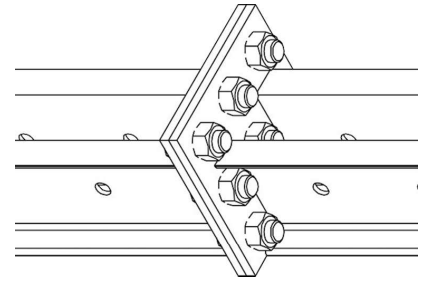


Strongbacks can be bolted to create different lengths.

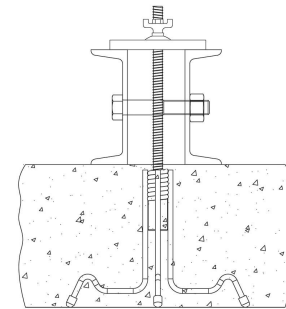

Butt Plate Waler used as strongback with Single Insert, Flat Washer and Strongback Bolt/Nut.

Butt Plate Waler/Strongback		
Part No.	Description	Weight
SBBPW84	Butt Plate Waler 8" x 4'	92 lbs
SBBPW88	Butt Plate Waler 8" x 8'	184 lbs
SBBPW810	Butt Plate Waler 8" x 10'	230 lbs
SBBPW1210	Butt Plate Waler 12" x 10'	500 lbs
SBBPW1215	Butt Plate Waler 12" x 20'	920 lbs
SBSBB	Strongback Bolt 3/4"x16"	---
SBSBB20	Strongback Bolt 3/4"x20"	---
SBFW3435	Flat Washer 3/4"x3"x5"	---
SBSBA112	Strongback Angle 12" OC	---
SBSWN34	Wing Nut 3/4"	---

*Moment capacity for 8" = 34.6 kip-ft @ 1.67:1 safety factor.
Moment capacity for 12" = 91.9 kip-ft @ 1.67:1 safety factor.*

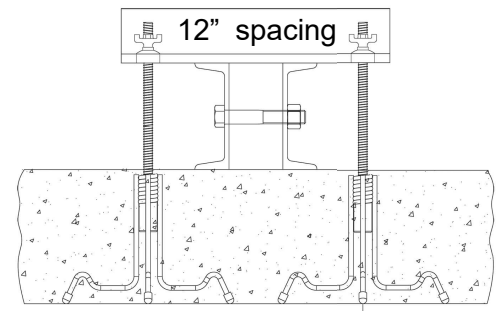

Butt Plate Waler used as strongback with Double Insert, Strongback Angle and Strongback Bolts/Nuts.

Strongback Inserts

The Strongback Angle is used to fasten the Butt Plate Strongback to the Double Insert and support the panel during lifting.

Strongback Insert with Plug* (Bolt sold separately)		
Part No.	Description	SWL**
SBSBI345	Strongback Insert 3/4"x5" wPlug	7,200 lbs
SBSBI346	Strongback Insert 3/4"x6" wPlug	9,600 lbs
SBSBI34612	Strongback Insert 3/4"x6-1/2" wPlug	9,900 lbs
SBSBI34714	Strongback Insert 3/4"x7-1/4" wPlug	10,200 lbs
SBSBI348	Strongback Insert 3/4"x8" wPlug	11,600 lbs
SBSBI34812	Strongback Insert 3/4"x8-1/2" wPlug	11,600 lbs
SBSBI34914	Strongback Insert 3/4"x9-1/4" wPlug	11,600 lbs
SBSBI3410	Strongback Insert 3/4"x10" wPlug	11,600 lbs
SBSBI341114	Strongback Insert 3/4"x11-1/4" wPlug	11,600 lbs
SBSBI3412	Strongback Insert 3/4"x12" wPlug	11,600 lbs


* Distance from edge is minimum 12" or loads must be reduced.

** Safe Working Load (SWL) based on 2:1 safety factor.


Double Strongback Insert (12" OC) with Spacer Strap		
Part No.	Description	SWL**
SBDSBI345	Double Insert 3/4"x5" wSpacer	12,960 lbs
SBDSBI346	Double Insert 3/4"x6" wSpacer	17,280 lbs
SBDSBI34612	Double Insert 3/4"x6-1/2" wSpacer	17,820 lbs
SBDSBI34714	Double Insert 3/4"x7-1/4" wPlug	18,360 lbs
SBDSBI348	Double Insert 3/4"x8" wSpacer	20,880 lbs
SBDSBI34812	Double Insert 3/4"x8-1/2" wSpacer	20,880 lbs
SBDSBI34914	Double Insert 3/4"x9-1/4" wSpacer	20,880 lbs
SBDSBI3410	Double Insert 3/4"x10" wSpacer	20,880 lbs
SBDSBI341114	Double Insert 3/4"x11-1/4" wSpacer	20,880 lbs
SBDSBI3412	Double Insert 3/4"x12" wSpacer	20,880 lbs
SBDSBISS12	Spacer Strap 12" OC	--

* Distance from edge must be a minimum 12" or load is reduced.


** Safe Working Load (SWL) based on 2:1 safety factor.

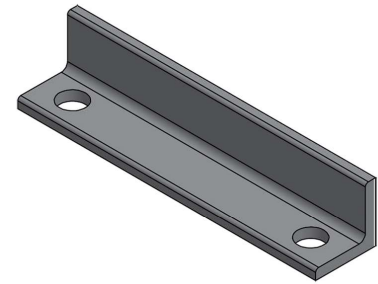


Strongback Angle

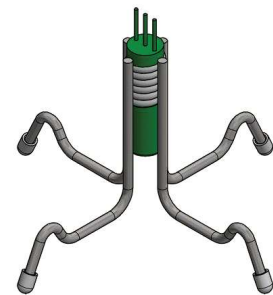

Strongback Insert

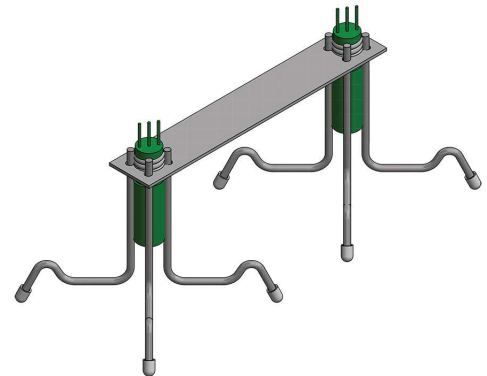

Double Strongback Insert (12" OC)
with Spacer Strap

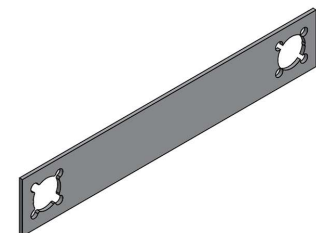


Spacer Strap (12" OC)

Brace Insert

The Brace Insert has wire legs, welded to a coil insert, with a disposable plastic plug. The wire legs have plastic feet to prevent corrosion at the concrete face. The plastic plug has antennae to locate the insert after concrete placement. The number and location of Brace Inserts will vary based on the dimensions of each tilt-up panel. Other sizes are available on request.

When the disposable plastic plug is removed from the tilt-up panel the coil insert is exposed, providing the anchor point for subsequent bracing.

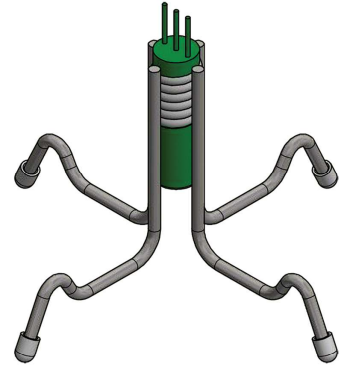

Brace Insert with Plug* (Bolt sold separately)		
Part No.	Description	SWL **
SBBI345	Brace Insert 3/4"x5" wPlug	7,200 lbs
SBBI346	Brace Insert 3/4"x6" wPlug	9,600 lbs
SBBI34612	Brace Insert 3/4"x6-1/2" wPlug	9,900 lbs
SBBI34714	Brace Insert 3/4"x7-1/4" wPlug	10,200 lbs
SBBI348	Brace Insert 3/4"x8" wPlug	11,600 lbs
SBBI34812	Brace Insert 3/4"x8-1/2" wPlug	11,600 lbs
SBBI34914	Brace Insert 3/4"x9-1/4" wPlug	11,600 lbs
SBBI3410	Brace Insert 3/4"x10" wPlug	11,600 lbs
SBBI341114	Brace Insert 3/4"x11-1/4" wPlug	11,600 lbs
SBBI3412	Brace Insert 3/4"x12" wPlug	11,600 lbs
SBCB344	Coil Bolt 3/4"x4"	---

* Distance from edge must be minimum 12" or load is reduced.

** Safe Working Load (SWL) based on 2:1 safety factor @ 3,000 psi.


Inverted Brace Insert

The Inverted Brace Insert is designed for tilt-up panels where the anchor point for bracing is located on the bottom side of the concrete placement. Other sizes are available on request.

Inverted Brace Insert with Plug* (Bolt sold separately)		
Part No.	Description	SWL **
SBIBI343	Inverted Brace Insert 3/4"x3" wPlug	6,500 lbs
SBIBI346	Inverted Brace Insert 3/4"x6" wPlug	9,000 lbs
SBCB344	Coil Bolt 3/4"x4"	---

* Distance from edge must be minimum 12" or load is reduced.


** Safe Working Load (SWL) based on 2:1 safety factor @ 3,000 psi.

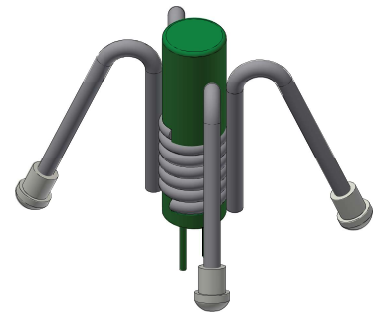


Double Brace Insert

The Double Brace Insert (10" OC) has wire legs, welded to a coil insert with disposable plastic plugs, and Spacer Strap. The wire legs have plastic feet to prevent corrosion at the concrete face. The plastic plugs have antennae to locate the inserts after concrete placement. The Spacer Strap keeps the inserts properly positioned. The number and location will vary based on the dimensions of each panel.

When the disposable plugs are removed from the panel, the coil inserts are exposed, providing the bolt locations for subsequent bracing.

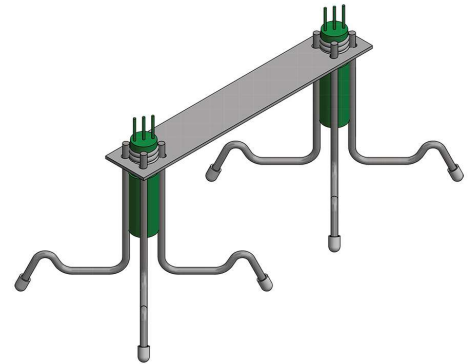

*Double Brace Insert (10" OC)
with Spacer Strap*

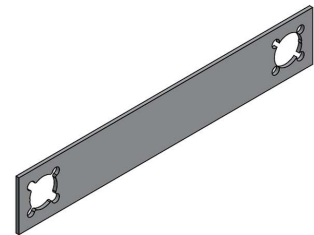

Spacer Strap (10" OC)


Double Brace Insert with Spacer Strap		
Part No.	Description	SWL **
SBDBI345	Double Brace Insert 3/4"x5"	12,960 lbs
SBDBI346	Double Brace Insert 3/4"x6"	17,280 lbs
SBDBI34612	Double Brace Insert 3/4"x6-1/2"	17,820 lbs
SBDBI34714	Double Brace Insert 3/4"x7-1/4"	18,360 lbs
SBDBI348	Double Brace Insert 3/4"x8"	20,880 lbs
SBDBI34812	Double Brace Insert 3/4"x8-1/2"	20,880 lbs
SBDBI34914	Double Brace Insert 3/4"x9-1/4"	20,880 lbs
SBDBI3410	Double Brace Insert 3/4"x10"	20,880 lbs
SBDBI341114	Double Brace Insert 3/4"x11-1/4"	20,880 lbs
SBDBI3412	Double Brace Insert 3/4"x12"	20,880 lbs
SBDBISS10	Spacer Strap 10" OC	--
SBCB344	Coil Bolt 3/4"x4"	---

* Distance from edge must be minimum 12" or load is reduced.

** Safe Working Load (SWL) based on 2:1 safety factor @ 3,000 psi.

Double Inverted Brace Insert

The Double Inverted Brace Insert (10" OC) is designed for panels where the anchor points for bracing are located on the bottom side of the concrete placement. Other sizes are available on request.

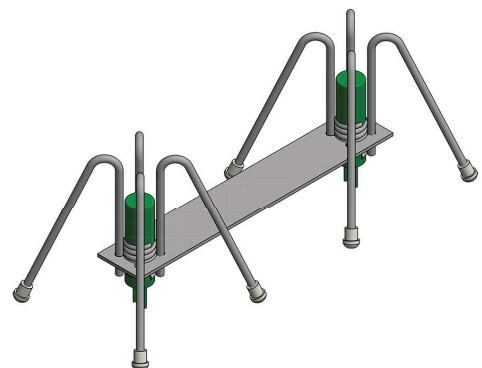

*Double Inverted Brace Insert
(10" OC) with Spacer Strap*

Double Inverted Brace Insert with Spacer Strap		
Part No.	Description	SWL **
SBDIBI343	Double Inv Brace Insert 3/4"x3"	13,000 lbs
SBDIBI346	Double Inv Brace Insert 3/4"x6"	17,280 lbs
SBCB344	Coil Bolt 3/4"x4"	---

* Distance from edge must be minimum 12" or load is reduced.

** Safe Working Load (SWL) based on 2:1 safety factor @ 3,000 psi.

Pipe Braces

Adjustable Pipe Braces have a telescoping pipe for rough dimension, 6" threaded rod for adjustment and connecting shoes for anchoring. There are three sizes of Adjustable Pipe Brace, ranging from 7'-6" to 40'-0" (refer to the table for additional information).

Pipe Braces have a fixed length, 18" threaded rod for adjustment and connecting shoes for anchoring. There are four sizes, including optional extension lengths, ranging from 16'-6" to 32'-3" (refer to the table for additional information).


Heavy-Duty Pipe Braces have a larger diameter pipe for greater capacity, 18" threaded rod for adjustment and connecting shoes anchoring. There are six sizes, including extensions, ranging from 31'-9" to 53'-3" (refer to the table for additional information).

Pipe Braces					
Part No.	Description	Length		Ultimate Brace Load* w/o Knee Bracing	Weight (lbs)
		Min	Max	Maximum	
Adjustable Pipe Brace					
SBUP1	Adjustable Pipe Brace	7'-6"	14'-0"	9,750 / 6,600 lbs	95.0
SBUP4	Adjustable Pipe Brace	14'-0"	23'-6"	9,750 / 3,200 lbs	130.0
SBUP5	Adjustable Pipe Brace	22'-6"	39'-0"	8,063 / not recommended	208.0
SBUP11A	Adjustable Pipe Brace	25'-6"	40'-0"	13,500 / 8,250 lbs	295.0
Pipe Brace (4" diameter)					
SBPB417	Pipe Brace	16'-6"	17'-6"	9,750 lbs	105.0
SBPB422	Pipe Brace	21'-0"	22'-2"	9,750 lbs	136.0
SBPB427	Pipe Brace w/ 5' Ext	26'-1"	27'-3"	7,200 lbs	188.0
SBPB432	Pipe Brace w/ 10' Ext	31'-1"	32'-3"	5,400 lbs	224.0
SBPBE45	Pipe Brace Ext Only 5'	5'-0"	-	-	23.0
SBPBE410	Pipe Brace Ext Only 10'	10'-0"	-	-	46.0
SBPBE415	Pipe Brace Ext Only 15'	15'-0"	-	-	69.0
Heavy-Duty Pipe Brace (5-1/2" diameter)					
SBPB51232	HD Pipe Brace	31'-9"	33'-3"	13,500 lbs	295.0
SBPB51232LHRH18	HD Pipe Brace w/ 18" Extensions	31'-9"	34'-9"	13,500 lbs	295.0
SBPB51237	HD Pipe Brace w/ 5' Ext	36'-9"	38'-3"	12,000 lbs	360.0
SBPB51242	HD Pipe Brace w/ 10' Ext	41'-9"	43'-3"	8,040 lbs	400.0
SBPB51252	HD Pipe Brace w/ 20' Ext	51'-9"	53'-3"	5,775 lbs	520.0


* Ultimate Brace Load based on test reports and calculations.

See Brace Spacing Bid Chart on pages 44-45


Adjustable Pipe Braces

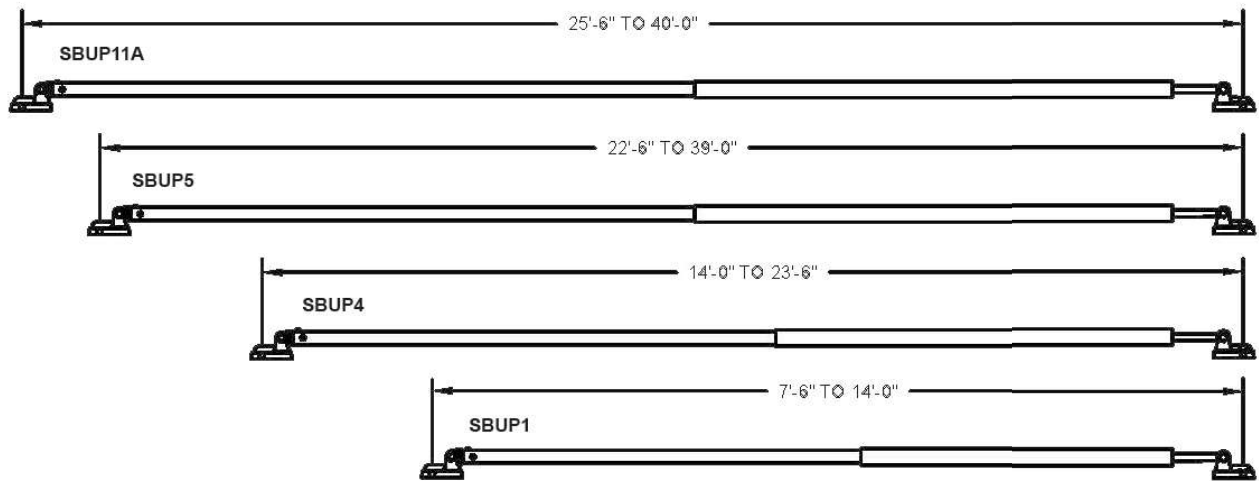


Fixed Pipe Braces (4" diameter)

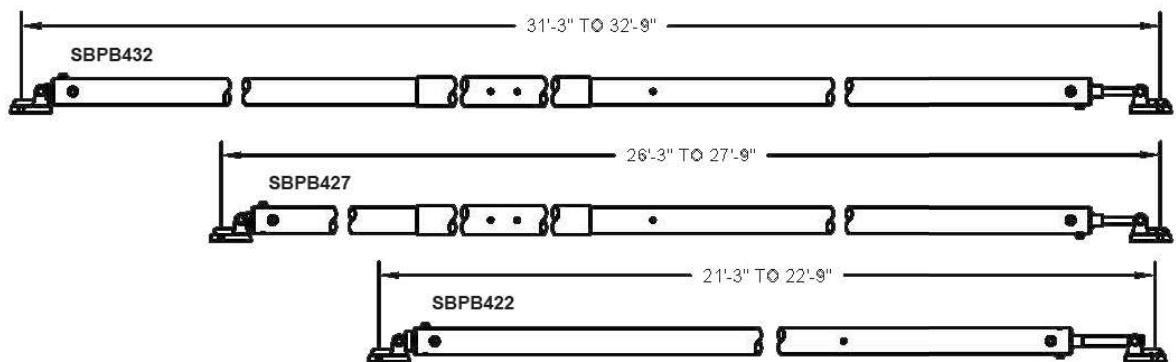

Heavy-Duty Fixed Pipe Braces (5-1/2" diameter)

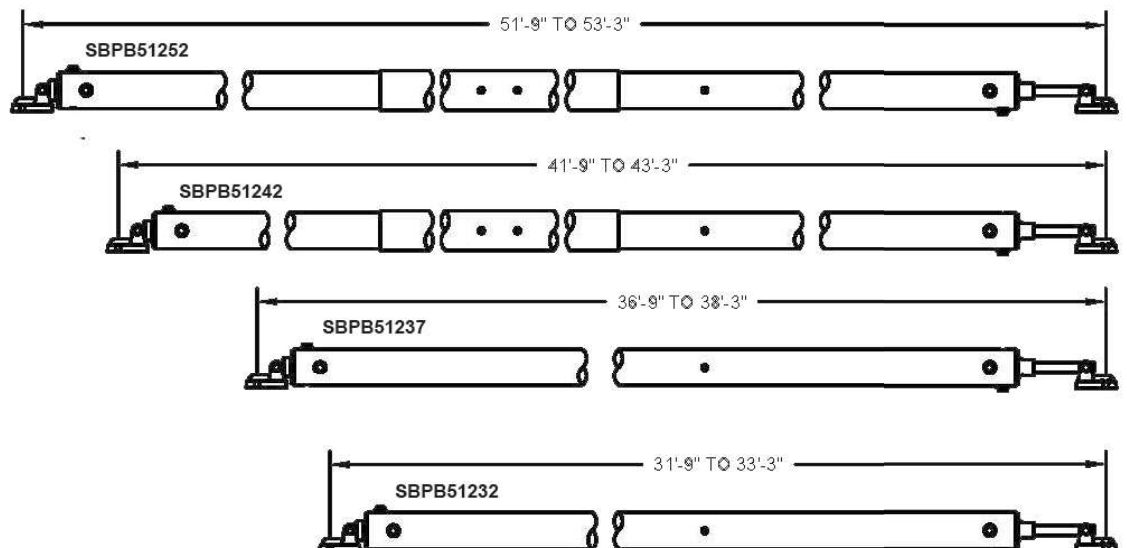

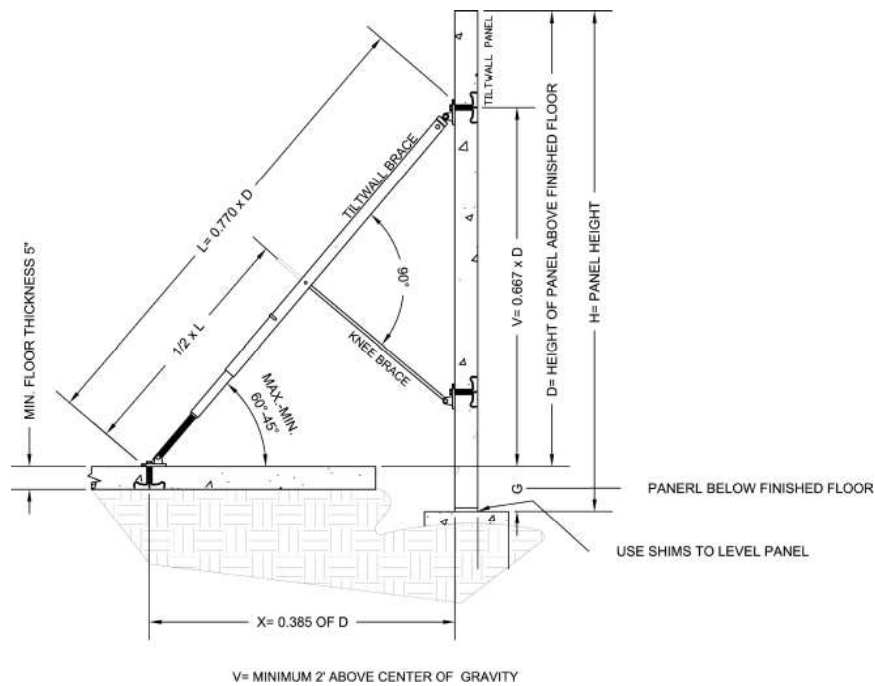

Adjustable Pipe Brace (SBUP1)

D	V	X	L	Ultimate Brace Load* w/o Knee Bracing
9'-9"	6'-6"	3'-9"	7'-6"	9,750 lbs
10'-5"	6'-11"	4'-0"	8'-0"	9,750 lbs
11'-8"	7'-9"	4'-6"	9'-0"	9,750 lbs
14'-3"	9'-6"	5'-5"	11'-0"	9,750 lbs
15'-7"	10'-5"	6'-0"	12'-0"	8,175 lbs
18'-2"	12'-1"	7'-0"	14'-0"	6,600 lbs

* Ultimate Brace Load based on test reports.

** Knee bracing requires knee, lateral and end bracing to obtain the loads indicated.

*** Range for 45-60 degree angle.

Note: Pipe Braces should always be inspected for unusual wear or damage after each use. Any Pipe Brace with missing parts, dents or kinks, indications of heating or other damage, should not be used until repaired.


Adjustable Pipe Brace (SBUP4)					
D	V	X	L	Ultimate Brace Load* w/o Knee Bracing	Ultimate Brace Load* with Knee Bracing**
19'-6"	13'-0"	7'-6"	15'-0"	9,750 lbs	9,750 lbs
20'-4"	13'-9"	7'-11"	15'-10"	9,750 lbs	9,750 lbs
21'-8"	14'-5"	8'-4"	16'-8"	9,750 lbs	9,750 lbs
22'-9"	15'-2"	8'-9"	17'-6"	8,880 lbs	9,750 lbs
23'-10"	15'-11"	9'-2"	18'-4"	7,200 lbs	9,750 lbs
24'-11"	16'-7"	9'-7"	19'-2"	5,888 lbs	9,750 lbs
25'-11"	17'-3"	10'-0"	20'-0"	5,363 lbs	9,750 lbs
27'-0"	18'-0"	10'-5"	20'-10"	4,464 lbs	9,750 lbs
28'-2"	18'-9"	10'-10"	21'-8"	3,750 lbs	9,750 lbs
29'-3"	19'-6"	11'-3"	22'-6"	3,412 lbs	9,750 lbs
30'-6"	20'-3"	11'-8"	23'-4"	3,200 lbs	9,750 lbs

* Ultimate Brace Load based on test reports and calculations.

** Knee bracing requires knee, lateral and end bracing to obtain the loads indicated.

*** Range for 45-60 degree angle.

Note: Pipe Braces should always be inspected for unusual wear or damage after each use. Any Pipe Brace with missing parts, dents or kinks, indications of heating or other damage, should not be used until repaired.

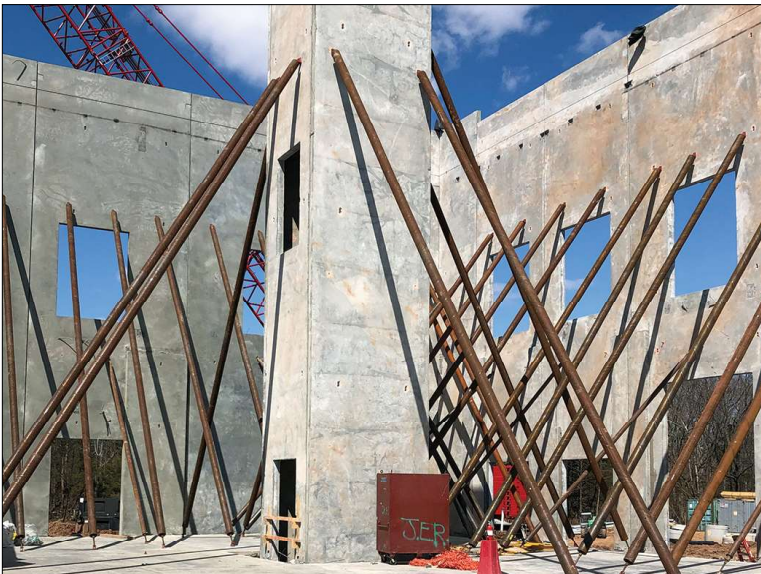

Adjustable Pipe Brace (SBUP5)					
D	V	X	L	Ultimate Brace Load* w/o Knee Bracing	Ultimate Brace Load* with Knee Bracing**
29'-3"	19'-6"	11'-3"	22'-6"	8,063 lbs	9,750 lbs
30'-4"	20'-3"	11'-8"	23'-4"	7,988 lbs	9,750 lbs
31'-5"	20'-11"	12'-1"	24'-2"	7,200 lbs	9,750 lbs
32'-6"	21'-8"	12'-6"	25'-0"	6,375 lbs	9,750 lbs
33'-7"	22'-5"	12'-11"	25'-10"	5,175 lbs	9,750 lbs
34'-8"	23'-1"	13'-4"	26'-8"	4,375 lbs	9,750 lbs
35'-9"	23'-10"	13'-9"	27'-6"	3,833 lbs	9,750 lbs
36'-10"	24'-7"	14'-2"	28'-4"	3,150 lbs	9,750 lbs
37'-11"	25'-3"	14'-7"	29'-2"	2,625 lbs	9,750 lbs
39'-0"	26'-0"	15'-0"	30'-0"	2,400 lbs	9,750 lbs
40'-0"	26'-8"	15'-3"	30'-10"	2,025 lbs	9,750 lbs
41'-1"	27'-5"	15'-10"	31'-8"	Not recommended	9,450 lbs
42'-2"	28'-1"	16'-3"	32'-6"	Not recommended	9,000 lbs
43'-3"	28'-10"	16'-8"	33'-4"	Not recommended	8,400 lbs
44'-4"	29'-6"	17'-1"	34'-2"	Not recommended	7,800 lbs
45'-5"	30'-3"	17'-6"	35'-0"	Not recommended	7,500 lbs
46'-6"	31'-0"	17'-11"	35'-10"	Not recommended	6,975 lbs
47'-7"	31'-9"	18'-4"	36'-8"	Not recommended	6,487 lbs
48'-8"	32'-3"	18'-9"	37'-6"	Not recommended	6,263 lbs
49'-9"	33'-2"	19'-2"	38'-4"	Not recommended	5,050 lbs
50'-8"	33'-10"	19'-6"	39'-0"	Not recommended	5,663 lbs

* Ultimate Brace Load based on test reports and calculations.

** Knee bracing requires knee, lateral and end bracing to obtain the loads indicated.

*** Range for 45-60 degree angle.

Note: Pipe Braces should always be inspected for unusual wear or damage after each use. Any Pipe Brace with missing parts, dents or kinks, indications of heating or other damage, should not be used until repaired.



Adjustable Pipe Brace (SBUP11A)

D	V	X	L	Ultimate Brace Load* w/o Knee Bracing
33'-2"	22'-2"	12'-9"	25'-6"	13,500 lbs
34'-2"	22'-10"	13'-2"	26'-4"	13,500 lbs
35'-3"	23'-6"	13'-7"	27'-2"	13,500 lbs
36'-4"	24'-3"	14'-0"	28'-0"	13,500 lbs
37'-5"	25'-0"	14'-5"	28'-10"	13,500 lbs
38'-6"	25'-8"	14'-10"	29'-8"	13,500 lbs
39'-7"	26'-5"	15'-3"	30'-6"	13,500 lbs
40'-8"	27'-2"	15'-8"	31'-4"	13,500 lbs
41'-9"	27'-10"	16'-1"	32'-2"	13,500 lbs
42'-10"	28'-7"	16'-6"	33'-0"	13,250 lbs
43'-11"	29'-4"	16'-11"	33'-10"	13,000 lbs
45'-0"	30'-0"	17'-4"	34'-8"	12,750 lbs
46'-1"	30'-9"	17'-9"	35'-6"	12,500 lbs
47'-2"	31'-6"	18'-2"	36'-4"	12,250 lbs
48'-3"	32'-2"	18'-6"	37'-2"	12,000 lbs
49'-4"	32'-11"	19'-0"	38'-0"	10,750 lbs
50'-5"	33'-8"	19'-5"	38'-10"	9,500 lbs
51'-6"	34'-4"	19'-10"	39'-8"	8,250 lbs

Pipe Braces

Part No.	D***	V***	X***	L	Ultimate Brace Load* w/o Knee Bracing
SBPB417	15'-0" to 24'-0"	13'-6"	10'-3"	17'-0"	9,750 lbs
SBPB422	19'-0" to 31'-0"	18'-1" to 19'-2"	12'-8" to 11'-1"	21'-7"	9,750 lbs
SBPB427	23'-0" to 39'-0"	22'-3" to 23'-7"	15'-7" to 13'-7"	26'-8"	7,200 lbs
SBPB432	27'-0" to 46'-0"	26'-5" to 27'-11"	18'-6" to 16'-1"	31'-8"	5,400 lbs
SBPB51232	27'-0" to 46'-0"	27'-0" to 28'-7"	18'-11" to 16'-6"	32'-6"	13,500 lbs
SBPB51237	31'-0" to 53'-0"	30'-6" to 31'-9"	21'-5" to 18'-7"	37'-6"	12,000 lbs
SBPB51242	35'-0" to 60'-0"	34'-1" to 35'-11"	23'-10" to 20'-9"	42'-6"	8,040 lbs
SBPB51252	40'-0" to 75'-0"	42'-3" to 44'-7"	29'-7" to 25'-9"	52'-6"	5,775 lbs

* Ultimate Brace Load based on test reports and calculations.

** Knee bracing requires knee, lateral and end bracing to obtain the loads indicated.


*** Range for 45-60 degree angle, minimum 2' above center of gravity.

Note: Pipe Braces should always be inspected for unusual wear or damage after each use. Any Pipe Brace with missing parts, dents or kinks, indications of heating or other damage, should not be used until repaired.

Modular Brace* - 6-5/8" Pipe

There's no need to stock every possible brace size when you can simply reconfigure the components using a handful of nuts and bolts.

The patent pending components can be assembled into three different lengths. You always have the size you need and reduce inventory at the same time.

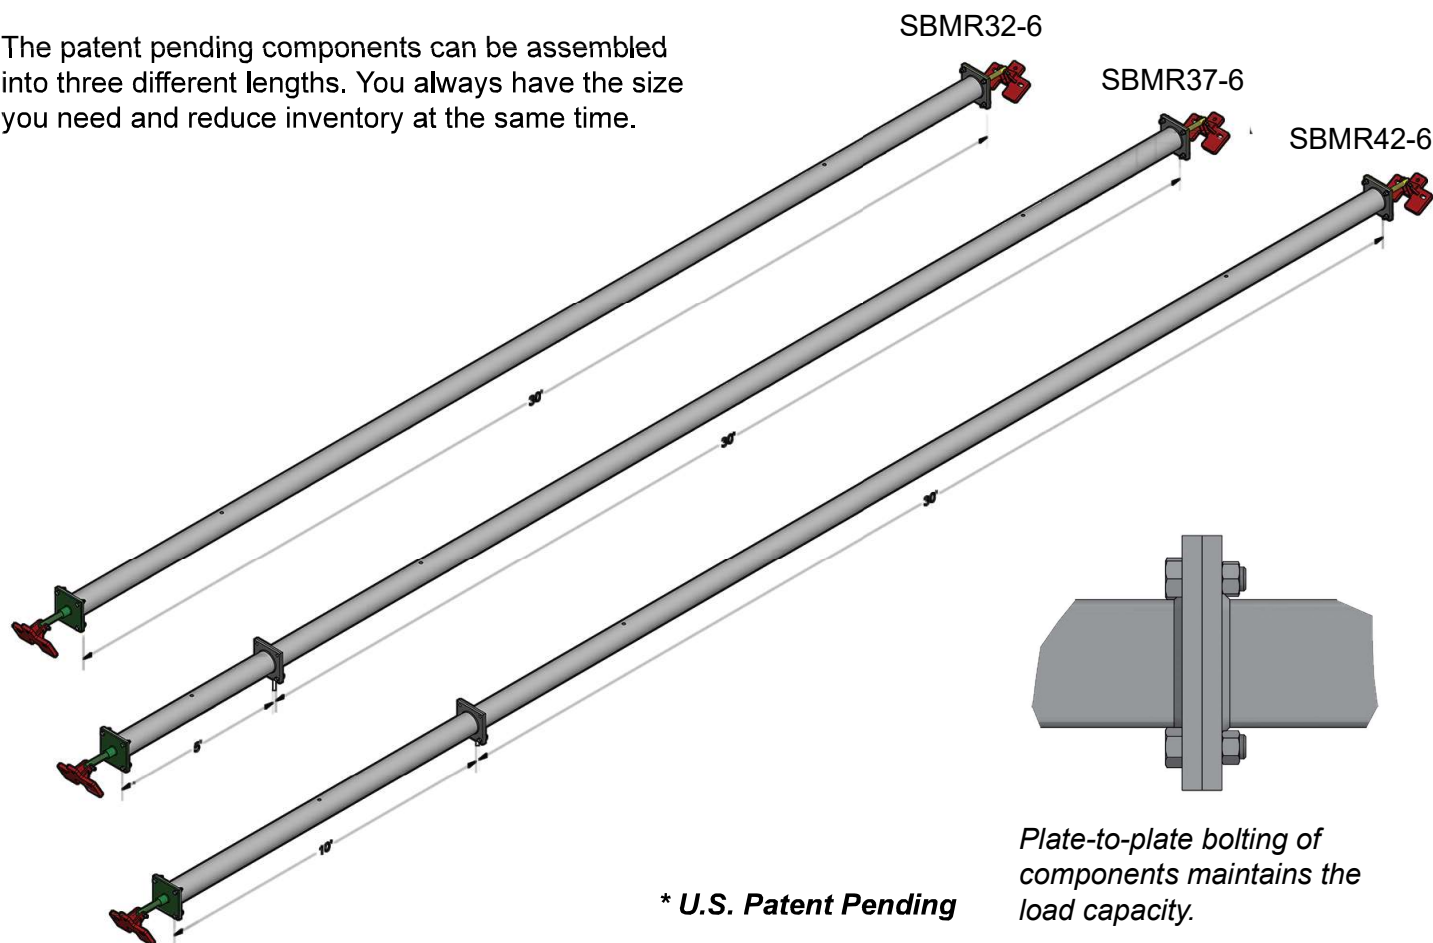

End Connector hardware has right- and left-hand threaded rods for a combined 24" total adjustment. The End Connectors are attached to a Brace Shoe with slots for anchoring. The type and number of bolts used with the shoe may limit brace loading.

Modular Brace - 6-5/8" Pipe						
Part No.	Description	Min	Max	Weight	Double-Bolt Ultimate Load	Single-Bolt Ultimate Load
SBMR326	Modular Brace 32' Complete	31'-7"	33'-7"	382.3 lbs	25,250 lbs	15,000 lbs
SBMR376	Modular Brace 37' Complete	36'-8"	38'-8"	455.7 lbs	22,000 lbs	15,000 lbs
SBMR426	Modular Brace 42' Complete	41'-9"	43'-9"	499.1 lbs	14,440 lbs	14,440 lbs


Each Modular Brace assembly has a right-hand and left-hand End Connector for a combined 24" adjustment. Loads based on actual test results. The full-moment connections require four 3/4"x2-1/2" Grade 5 (min) bolts, four structural washers, and four 3/4" Nylock nuts, torqued to a minimum of 150 ft-lbs.

See Brace Spacing Bid Chart on pages 44-45

Modular Brace* - 8-5/8" Pipe

As panels increase in height and weight, you can use an even longer version of the Modular Brace. With an 8-5/8" diameter, these components provide the capacity for the increasing panel sizes.

You can still reconfigure the brace components with plate-to-plate bolting and always have the size you need, while reducing inventory.

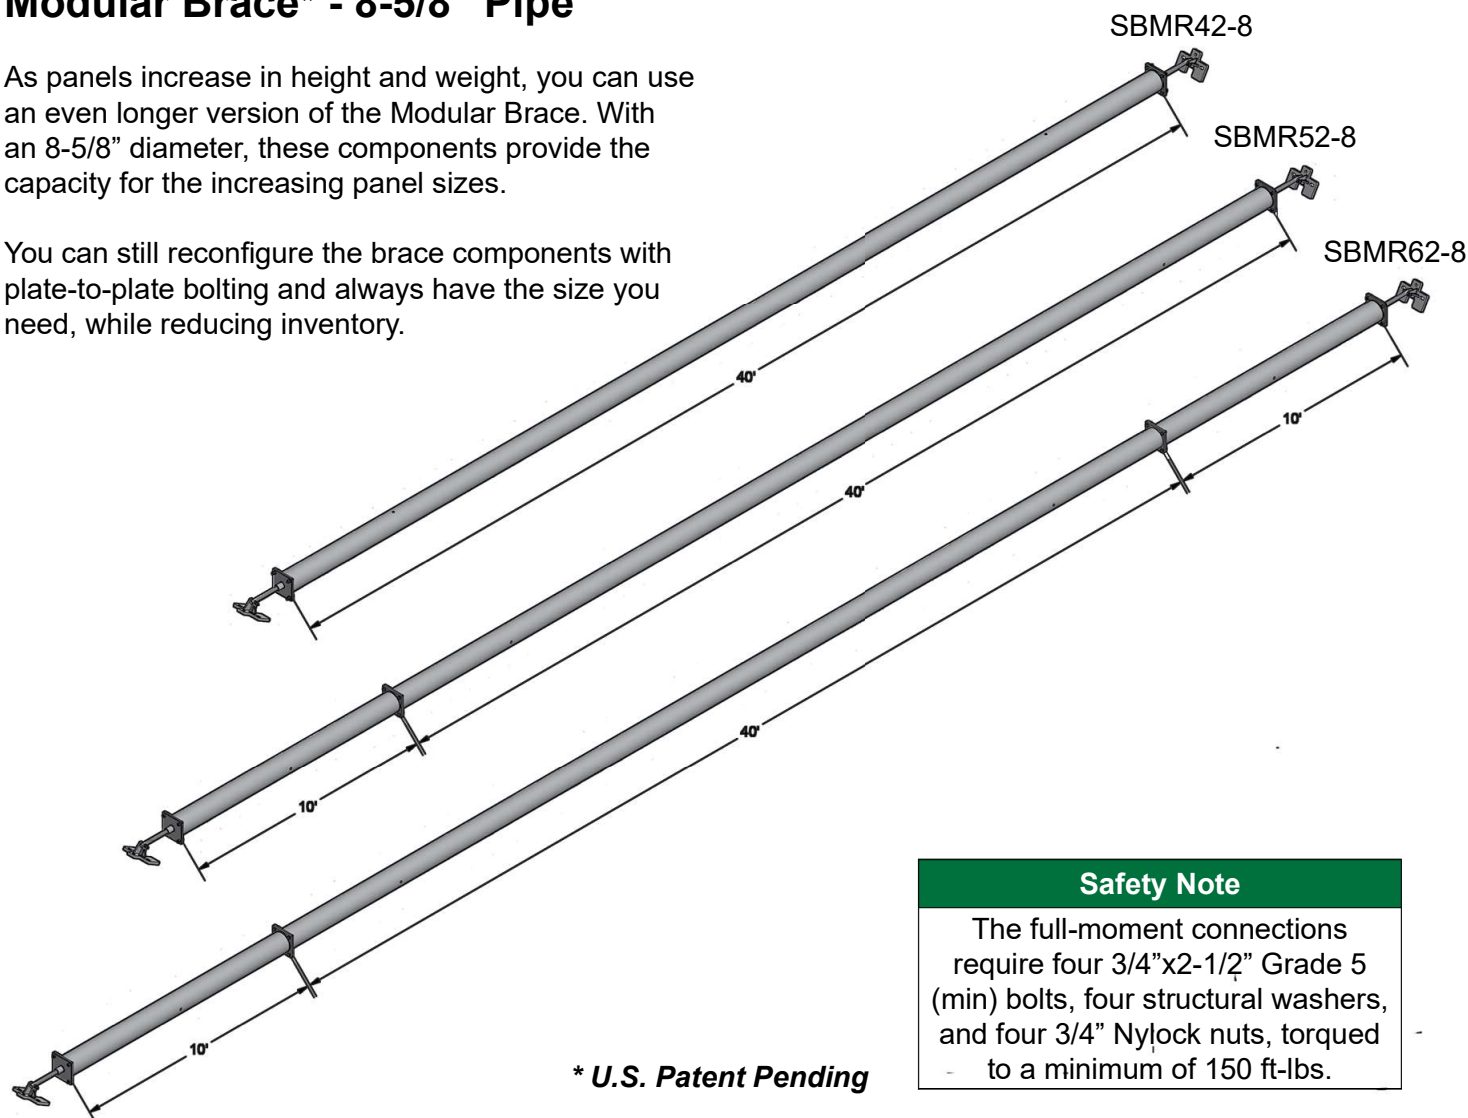

*** U.S. Patent Pending**

Safety Note

The full-moment connections require four 3/4"x2-1/2" Grade 5 (min) bolts, four structural washers, and four 3/4" Nylock nuts, torqued to a minimum of 150 ft-lbs.

End Connector hardware has right- and left-hand threaded rods for a combined 24" total adjustment. The End Connectors are attached to a Triple-Slot Brace Shoe for anchoring. The type and number of bolts used with the shoe may limit brace loading.

Modular Brace - 8-5/8" Pipe						
Part No.	Description	Min	Max	Weight	Double-Bolt Ultimate Load	Single-Bolt Ultimate Load
SBMR428	Modular Brace 42' Complete	41'-7"	43'-7"	587.3 lbs	25,250 lbs	15,000 lbs
SBMR528	Modular Brace 52' Complete	51'-8"	53'-8"	733.6 lbs	19,850 lbs	15,000 lbs
SBMR628	Modular Brace 62' Complete	61'-9"	63'-9"	879.9 lbs	14,440 lbs	14,440 lbs

Each Modular Brace assembly has a right-hand and left-hand End Connector for a combined 24" adjustment. Loads based on test results. The full-moment connections require four 3/4"x2-1/2" Grade 5 (min) bolts, four structural washers, and four 3/4" Nylock nuts, torqued to a minimum of 150 ft-lbs.


See Brace Spacing Bid Chart on pages 44-45

Modular Brace* Components

Each Modular Brace assembly has a right-hand (RH) and left-hand (LH) End Connector. In combination, the threaded rods provide 24" of adjustment, 6" more than conventional braces.

Each End Connector is attached to a Brace Shoe with Triple-Slots for anchoring. The type and number of bolts used with the shoe may limit the brace capacity.

End Connectors and Brace Shoes, including the Nuts and Bolts used for plate-to-plate connections, are interchangeable. The components can be used to assemble a Modular Brace, then reconfigured for another size.

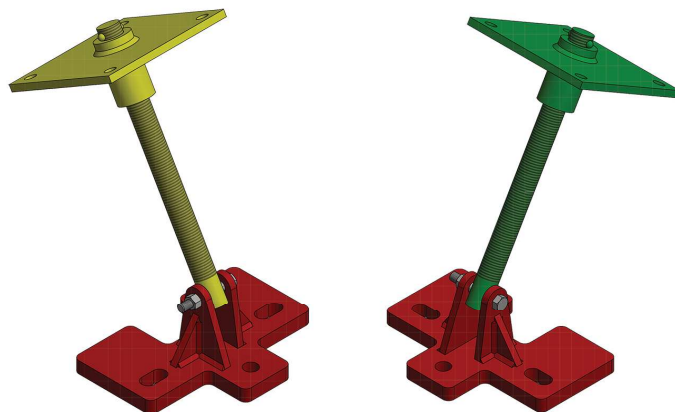

End Connector LH (yellow) with Brace Shoe 3-Bolt End Connector RH (green) with Brace Shoe 3-Bolt

Modular Brace* Components - 6-5/8" Pipe		
Part No.	Description	Weight
SBMR306	Modular Pipe 30' Only	290.3 lbs
SBMR106	Modular Pipe 10' Only	116.8 lbs
SBMR56	Modular Pipe 5' Only	73.4 lbs

Modular Brace* Components - 8-5/8" Pipe		
Part No.	Description	Weight
SBMR408	Modular Pipe 40' Only	495.3 lbs
SBMR108	Modular Pipe 10' Only	146.3 lbs

Modular Brace* Hardware		
Part No.	Description	Weight
SBMECRH	End Connector RH Green	46.0 lbs
SBMECLH	End Connector LH Yellow	46.0 lbs
SBBS3B	Brace Shoe 3-Bolt	19.2 lbs
SBMRB34212	Bolt 3/4"x2-1/2" Grade 5	---
SBMRW	Washer 3/4" Structural	---
SBMRN34	Nylock Nut 3/4"	---





*** U.S. Patent Pending**

HGA Bracket*

The Helical Ground Anchor (HGA) Bracket provides a simple connection point between HGAs and tilt-up braces. The design eliminates the need to remove, then reattach, pipe brace shoes. The pipe brace shoe bolts directly to the bracket.

The HGA Bracket is available in a 1-Bolt, 2-Bolt or 3-Bolt configuration. The tilt-up panel engineering, bracing and anchoring requirements will determine which HGA Bracket is the most effective.

Each configuration of the HGA Bracket comes with 3/4" x 4" grade 8 bolts for fastening the HGA Bracket to the shoes and a grade 8 bolt and nut for fastening the bracket to the HGA.

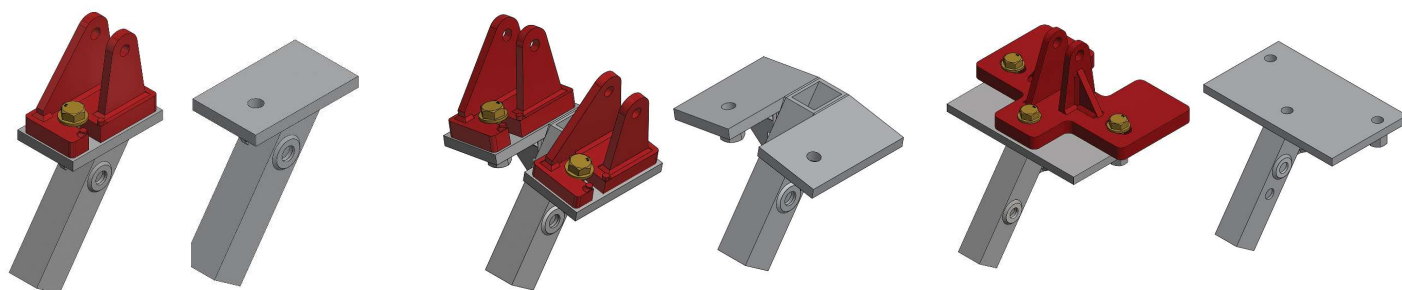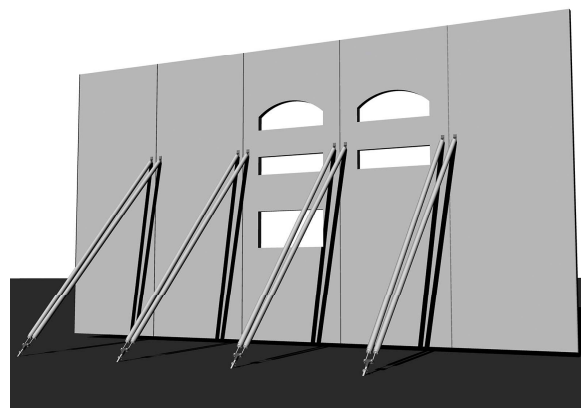


HGA Bracket in 1-Bolt, 2-Bolt, and 3-Bolt configurations with and without brace shoe.


HGA Brackets			
Part No.	Description	SWL* (lbs)	Ultimate Load (lbs)
SBSTBC	Standard Transitional Brace Connector (STBC)	15,000	24,000
SBHGA1PB	HGA Bracket 1-Bolt	10,000	16,700
SBHGA2PB	HGA Bracket 2-Bolt	20,000**	24,000
SBHGA3PB	HGA Bracket 3-Bolt	20,000**	24,000

* Safe Working Load based on 1.67:1 safety factor.

** Capacity of Helical Ground Anchor may control design.

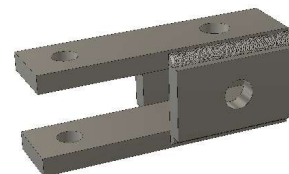

Standard Transitional Brace Connector (STBC)

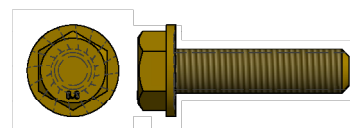

3/4"x4" grade 8 bolts provided with HGA Brackets

Note: The load-ratings of the helical ground anchor, tilt-up brace and HGA Bracket must be considered simultaneously for maximum allowable capacity and spacing.

Note: Helical Ground Anchor, Pipe Brace, and/or soil conditions may be the controlling factor. Capacities for all components must be considered when engineering a bracing configuration.

* U.S. Patent Pending

Helical Ground Anchor

The Helical Ground Anchor provides temporary and reusable ground support method for anchoring braces.

HGAs provide an engineered alternative to slab bolting or concrete deadmen. The anchor is a square steel shaft with helix plates that “screws” into the ground with continuous downward force. The anchor will establish a load capacity for subsequent brace attachment (depending on the soil condition and strata).

HGAs are both economical and effective. Benefits include: eliminating forming and handling a concrete deadman at each brace location, eliminating drilling, bolting and patching the floor slab at each brace location, and a verifiable load rating in all soil conditions from the torque installation method.

HGAs provide a quick installation and removal method for anchor placement. Compatible with Helical Anchor Extensions, HGA Brackets and Pipe Braces.



A skidsteer with a torque motor attachment is used to install the Helical Ground Anchor at the prescribed angle and depth for bracing.



The lower two flights on the HGA have “C” shape chisel flight finish. Top flight has standard straight flight finish.

The HGA Extension has standard straight flight finish.

Helical Ground Anchor Installation

1. The Helical Ground Anchor should be installed by a trained professional using a skidsteer with a torque motor. Do not weld, cut or alter the Helical Ground Anchor. Do not use worn or damaged components.
2. All subsurface structures and utilities must be properly marked before Helical Ground Anchor installation begins. Provide horizontal clearance of 5' in all directions.
3. The Helical Ground Anchor must be installed with continuous downward pressure to a minimum torque of 2,400 ft-lbs. A Helical Anchor Extension is necessary if the minimum is not achieved.
4. A field log of the site location and torque value of each and every Helical Ground Anchor is required for all construction projects. Prevent soil erosion at all anchor locations.
5. The Helical Ground Anchor must be installed in line with the brace for maximum capacity. Alternative geometry requires appropriate bracing and anchoring calculations.
6. The HGA Bracket, with optional single or double mounting plate, must be used for the brace connection. The bracket attaches to the anchor and the brace shoe bolts directly to the bracket plate.

Helical Ground Anchor*							
Part No.	Description	Size of Square Bar	Length	# of Helicals	Helical Diameters	SWL (lbs)	Ultimate Load (lbs)
SBHA7	Helical Ground Anchor 7'	1-1/2"	84"	3	8"-10"-10"	12,000	24,000
SBHAE	HGA Extension	1-1/2"	42"	1	10"	15,000	24,000

* Allowable torque for product is 2,400 ft-lbs.

* Design by an experienced professional only.

* Installation by a trained contractor only.

*3/4" Grade 5 Bolt for connection to HGA



The HGA Bracket sleeves over the Helical Ground Anchor and is available with a double or single mounting plate option for braces.


Titan HD Screw Anchor

A screw anchor is used to with the Brace Shoe to secure each Pipe Brace to the concrete floor. The load-rated, Titen-brand screw anchor has a flanged head and unthreaded shaft, allowing for the thickness of the shoe.




Titen HD Screw Anchor			
Part No.	Description	Slab	SWL *
SBTHD346G	Titen HD Anchor 3/4"x6" Galv	6"	7,500 lbs
SBTHD347G	Titen HD Anchor 3/4"x7" Galv	7"	9,000 lbs


* Safe Working Load (SWL) using 2:1 safety factor in 3,000 psi concrete.

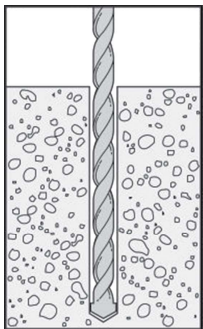


Drill hole

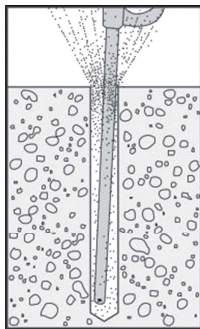

Clean hole

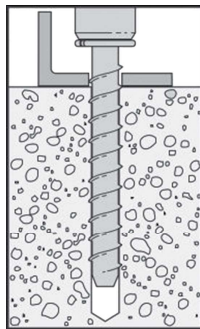

Torque bolt

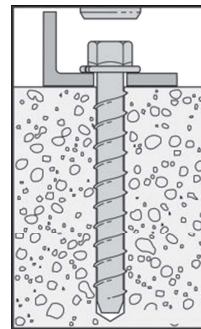

Check fit

Warning:

1. Concrete must have a minimum of 3,000 psi compressive strength.
2. Do not use the Titen HD Anchor in concrete floors thinner than 6".
3. Edge distance should be a minimum of 12" to center of holes.
4. Do not reuse Titen HD Anchor bolts.

Installation:


1. Drill holes at 90° angle to the surface with a 3/4" carbide-tipped bit.
2. Drill a minimum of 5-3/4" deep for 6" anchor.
3. Clean the drilled holes with compressed air or blow-out bulb.
4. Only use new Anchors with clean and undamaged threads.
5. Place Brace Shoe over the hole and position anchor.
6. Securely tighten anchor using a 3/4" impact wrench to 100 ft-lbs.
7. Use 3/4" F436 Structural Washer where needed.

Other bolts and brands are acceptable. Bolts must be 3/4" diameter and capacities confirmed with the manufacturer before installation.

Taper Bolt

A reusable bolt and disposable expander nut for temporary brace installations.

- Removable bolt for temporary anchoring.
- Required hole diameter equals bolt dimension.
- Expander nut adjusts for variation in hole size.
- Taper Bolt assembly will work in “bottomless” hole.
- Torqued to obtain high-strength shear load value.
- Withstands static and vibratory loads.
- Bolt can be removed, cleaned and reused.

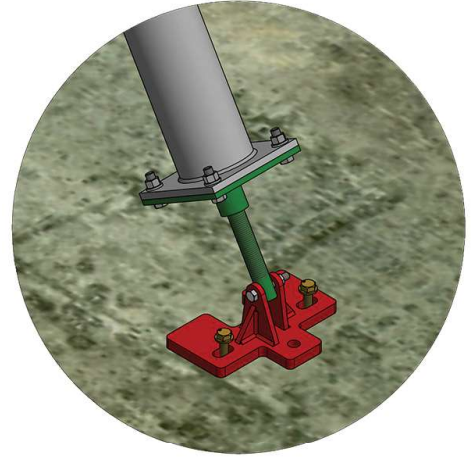

The Taper Bolt and Nut are ideal for anchoring and then removing tilt-up braces.





Taper Bolt and Nut*								
Part No.	Bolt Size**	Min Slab	Min Torque (ft/lbs)	Min Embed	Ultimate***			
					Single Bolt		Double Bolt (10" OC)	
					Tension (lbs)	Shear (lbs)	Tension (lbs)	Shear (lbs)
SBTB34418	3/4"x4-1/8"	5"	250	3-3/8"	7,200	14,440	14,800	29,700
SBTB34512	3/4"x5-1/2"	6"	250	4-1/2"	11,900	24,800	21,600	43,000
SBTB347	3/4"x7"	7"	250	6"	11,900	27,916	23,800	55,800
SBTB1558	1"x5-5/8"	6"	550	4-5/8"	12,900	25,900	22,300	44,600
SBTB1634	1"x6-3/4"	7"	550	5-3/4"	17,900	35,950	28,300	56,700
SBTB1714	1"x7-1/4"	8"	550	6-1/4"	20,300	36,257	31,200	62,400
SBTBN34	3/4" Nut							
SBTBN1	1" Nut							

* Standard Grade 5, zinc-plated finish. Other metals and finishes available on request.

** Required hole diameter equals bolt dimensions.

*** Ultimate load in 3,000 psi concrete. Tested by Pittsburgh Testing Laboratory PG-2170.

1. Drill a hole the same diameter as the Taper Bolt using the Brace Shoe as a template.
2. Clean hole and surrounding area with compressed air.
3. Drive Taper Bolt and Expander Nut into place leaving clearance for subsequent tightening.
4. Tighten Taper Bolt to recommended torque setting to expand nut.
5. For multiple Taper Bolt installation use an Impact Wrench for productivity.
6. Unscrew the Taper Bolt for removal. Expander Nut remains in hole.
7. Clean, lubricate and save the Taper Bolt for the next installation.

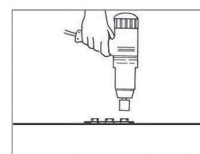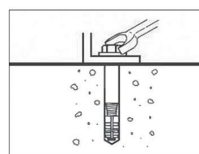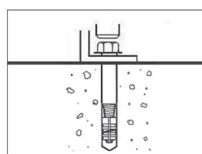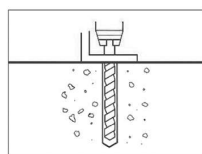

Panel Base Connector*

The Panel Base Connector is easy to position and fasten at the bottom edge of the form. It can be placed in either a face-up or face-down orientation depending on the forming and handling preference.


The high-strength, drill-in 3/4"x10" screw anchor provides an immediate and secure connection when tightened. There is no grout set-up or wait time.

The connection is centered in the concrete panel, minimizing moment and eccentric forces in the design, and resisting in-plane tension and out-of-plane shear forces.

The connection provides a nominal capacity in excess of 10 Kips for shear and tension, meeting the applicable ACI requirements.

The relatively small access area is easy to grout, providing complete embedment and encapsulation for corrosion protection.

Meets ACI integrity requirements of ACI-318 -11 16.5.1.3(b) ACI318-14 16.2.4.3(b), ACI-318-19 16.2.4.3 (b), and ACI 551.2R-15 Chapter 8.

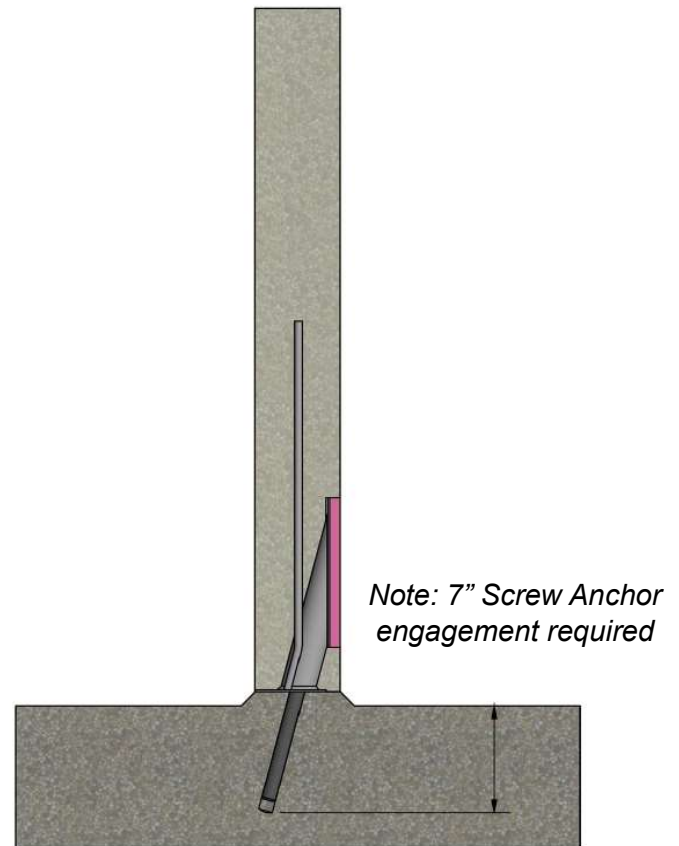

Panel Base Connector	
Part No.	Description
SBPBC34HD	Panel Base Connector
SBPBCSA3410	Screw Anchor 3/4" x 10"

Average tensile test value is 34,896 lbs in 6,555 psi concrete.

Conversion from psi to tensile:

6000 psi = 33,381 lbs

5000 psi = 30,472 lbs




4000 psi = 27,255 lbs

3000 psi = 23,604 lbs


*Testing observed and verified
by a Professional Engineer.*

Basic Installation


1. Position and fasten the Panel Base Connector to the desired location(s) in the bottom edge of panel formwork using the holes provided.
2. Cast, lift, handle and erect the completed panel on the concrete footing or foundation as typical.
3. Remove the foam cover from the face of Panel Base Connector.
4. Drill a minimum 3/4" x 7" hole, using a 3/4" x 24", bit through the opening of the Panel Base Connector into the footing or foundation.
5. Clean/vacuum the concrete dust from each hole.
6. Place a 3/4" x 10" screw anchor through the Panel Base Connector into the footing or foundation.
7. Torque anchor into the footing or foundation with a maximum of 150 ft.-lbs. Do not over-torque anchor.
8. Fill the access cavity with grout and finish flush with panel surface.

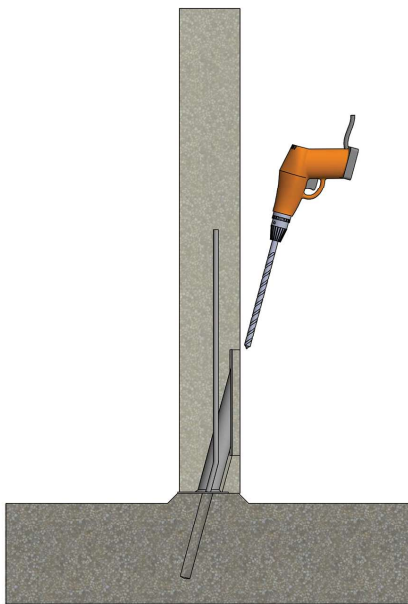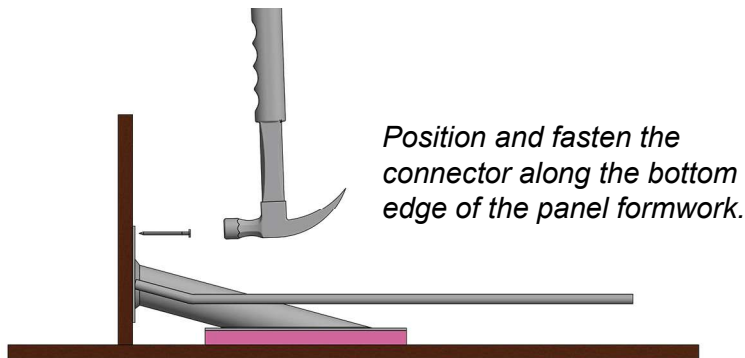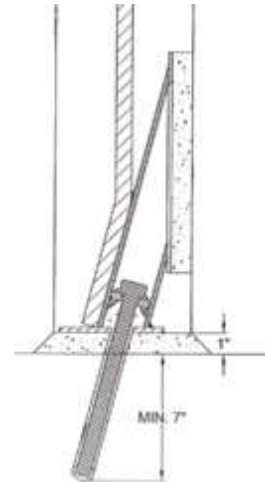

Drill a 3/4" x 7" hole, using a 3/4" x 24" bit, through the opening of the connector into the footing or foundation.

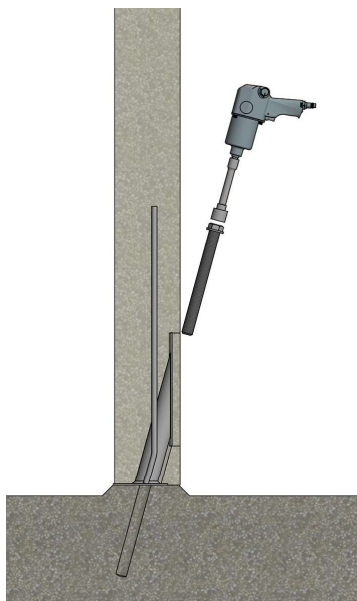

Place a 3/4" x 10" screw anchor through the connector and footing or foundation, then torque to 150 ft.-lbs.

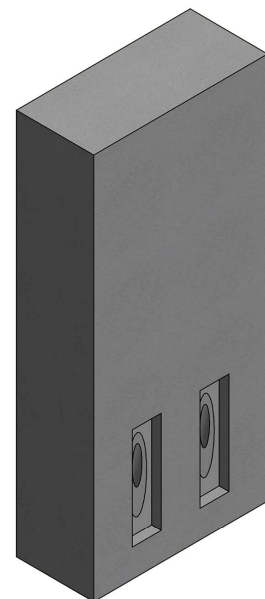

Fill the cavity with grout and finish flush with surface.

Slant Anchor*

The Slant Anchor assembly connects tilt-up or precast panels to the foundation. The assembly includes a load-rated Slant Anchor, foam Void Former, high-strength Ductile Bar and pre-packaged Flowable Grout.


The Slant Anchor is integral to panel design and planning. The anchors are positioned and reinforced in each panel during concrete forming operations. The foam Void Former covers the connection sleeve during concrete placement.

Once a completed concrete panel is ready for installation, the foam Void Former is removed. The connection sleeve is now visible and accessible for subsequent anchoring.

Each concrete panel is positioned on the foundation and braced. A hole is drilled into the foundation footing using the connection sleeve as a guide.

The hole is then partially grouted, the Ductile Bar inserted, and the remaining grout used to fill the sleeve. This grouted connection anchors the panel without welding or bolting.

The working load of the Slant Anchor is 9,000 lbs for uplift, horizontal and shear forces, at a 3:1 safety factor. This meets the tensile strength requirements of ACI-318-14 section 16.2.4.3 (b), ACI-318-19 section 16.2.4.3 (b), and ACI 551.2R-15 Chapter 8.

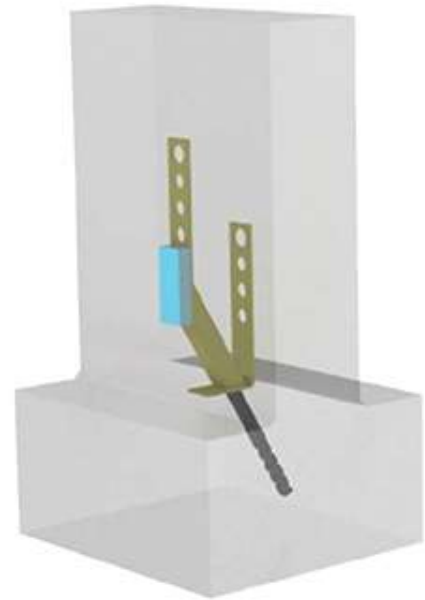

The Slant Anchor assembly provides a load-rated panel connection and a 37% savings compared to typical embed welding or bolting.

Slant Anchor Assembly*			
Part No.	Type	Panel Width	Finish**
SBTSAC	Standard	7" minimum	Painted
SBPSAC	Slim	5-1/2" to 7"	Painted

* Assembly includes anchor, void former, ductile bar and grout.

** Optional galvanized finish on request.



Standard



Slim



The Slant Anchor is simply positioned and nailed to the form.


* U.S. Patent Pending

Edge Connector

The Edge Connector is a rebar-winged embed designed for tilt-up concrete applications. The “wing” is tied into the panel reinforcing steel, with the “flat” positioned at the panel edge for later welding.

The rectangular “flat” on the Edge Connector provides for a thicker, more reliable, field welding surface between adjoining panels. The rectangular shape exhibits greater weld strength, with less variability, compared to typical round slugs.

The Edge Connector exhibits excellent performance in Horizontal Shear, Tension and Vertical Shear, making it suitable for tilt-up concrete applications, such as panel-to-panel connections, roof slabs and industrial walls.

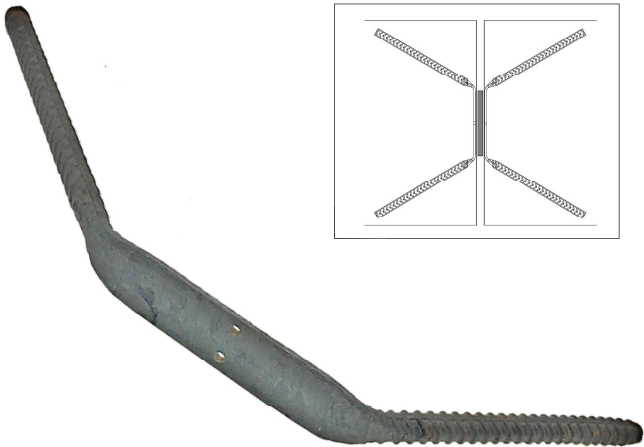

Edge Connectors are used to join adjacent precast or tilt-up concrete elements.

Edge Connector					
Part No.	Description	Type	Horizontal Shear*	Tension*	Vertical Shear*
SBEC4R	Edge Connector #4 w/1" Flange	A706	3,020 lbs	7,210 lbs	16,250 lbs
SBEC4RSS	Edge Connector #4 w/1" Flange	2304SS	3,020 lbs	9,340 lbs	18,960 lbs
SBEC5R	Edge Connector #5 w/1-1/2" Flange	A706	6,390 lbs	11,740 lbs	27,680 lbs
SBEC5RSS	Edge Connector #5 w/1-1/2" Flange	2304SS	6,390 lbs	12,590 lbs	32,670 lbs


* Ultimate load capacities.

Edge Connector Former*	
Part No.	Description
SBEC4F	Edge Connector Former #4 1" (Red)
SBEC5F	Edge Connector Former #5 1-1/2" (Blue)



Former for Edge Connector positioning.

* Plastic Former accurately positions Edge Connector in form.

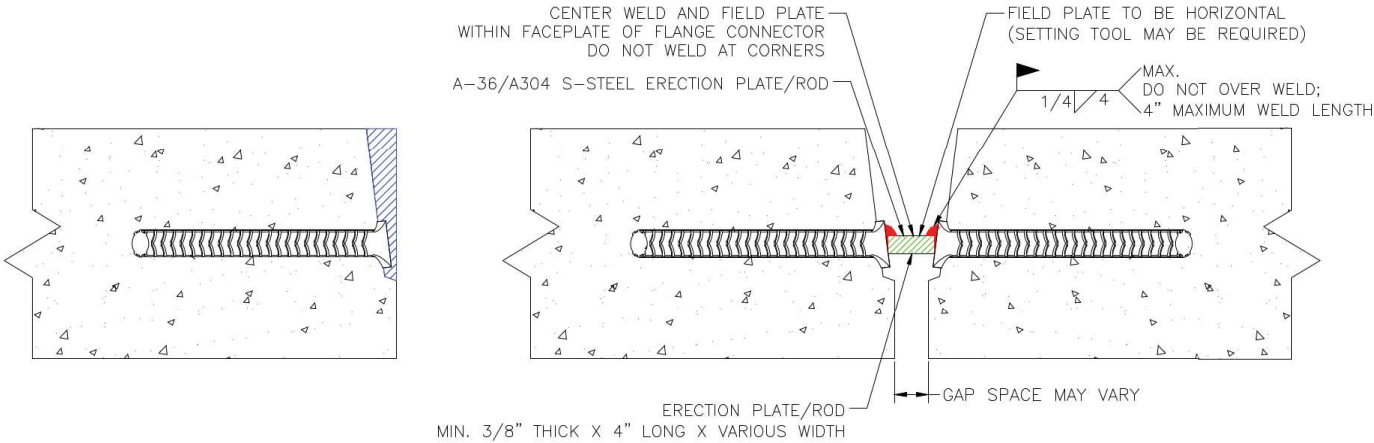


Edge Form Bracket 6x8, 9x11

Stop cutting lumber blocks for bracing and start forming faster with the reusable Edge Form Bracket.

The one-piece plastic design is a wedge-shape that braces tilt-up edge forms.

The top of the Edge Form Brackets should always be positioned below the overall form height to not interfere with concrete screeding or finishing.

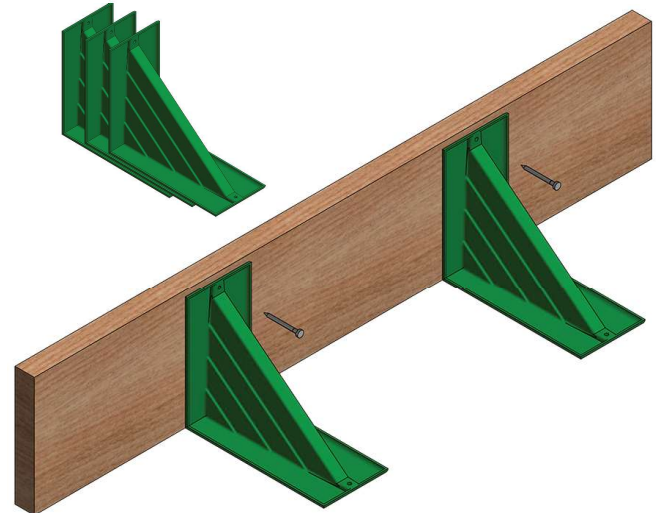

Nail, screw or glue to lumber and concrete. Then brackets can be stripped, stacked, saved and reused.

Edge Form Bracket	
Part No.	Description
SBEFG6X8	Edge Form Bracket 6"x8"
SBEFX9X11	Edge Form Bracket 9"x11"

Adhesives & Cleaner

Construction Adhesive

A high-strength, fast-drying, pressure-sensitive adhesive used for positioning chamfers, reveals and rustications in tilt-up casting beds. Suitable for concrete, metal, plastic and wood surfaces.

All Weather Adhesive

100% solid, All weather, high-strength adhesive used for positioning chamfers, reveals and rustications in tilt-up casting beds. Suitable for concrete, metal, plastic and wood surfaces.

Adhesive Cleaner

Adhesive Cleaner was designed to help clean up adhesive residue. The solvent system attacks residue and can be applied with a sponge and applicator. Adhesive Cleaner is great for removing common aerosol adhesives used in tilt-up construction.



*Construction Adhesive
aerosol can - canister tank*

*All Weather Adhesive
sausage pack*

All the Edge Form Brackets can be attached with Construction Adhesive or All Weather Adhesive . The brackets are scraped free when forming is complete.

Adhesives & Cleaner		
Part No.	Description	Packaging
SBFCA14	Construction Adhesive - LVOC inverted aerosol spray - 14oz can	12/case, 108 cases/pallet
SBAWA20	All-Weather Adhesive - 20 oz sausage pack - 100% solids	12/case, 45 cases/pallet
SBFCA28	Construction Adhesive - canister tank - 28 lbs	36/pallet
SBFAC5	Adhesive Cleaner - 5 gallon pail	36/pallet


Tilt-Up Profiles

Detailed lines, chamfered edges and smooth reveals for a better concrete panel appearance.

Saw Cut Cover

A semi-rigid, plastic t-strip used to seal concrete saw cut joints before pouring tilt-up panels.


Saw Cut Cover		
Part No.	Description	lf/bundle
SBSCC2	3/8" Top x 5/8" Deep x 8' Cover Strip	1000

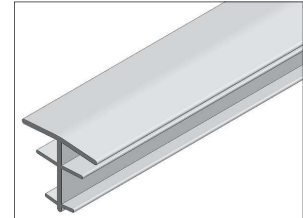

Single Chamfer

A plastic or wood profile to make smooth concrete panel edges.


Single Chamfer		
Part No.	Description	lf/bundle
SBSCW	3/4" x 8' Wood Chamfer	400
SBSCP	3/4" x 12' Plastic Chamfer	300

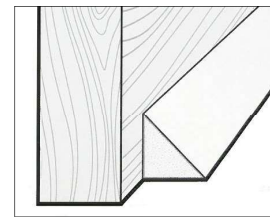

Double-Chamfer

A double-chamfer plastic profile used on both the top and bottom of lumber forms to create smooth concrete panel edges.


Double Chamfer		
Part No.	Description	lf/box
SBDC1534	1-1/2" x 3/4" x 10' Double Chamfer	200

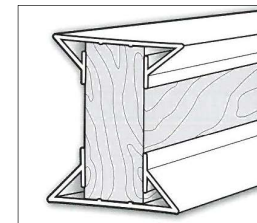

Rustication

An easy-to-install rustication profile for tilt-up panels.

Rustication		
Part No.	Description (AxBxC)	lf/bundle
SBSTIX1	2-1/4" x 3/4" x 3/4" x 8' Trapezoid	400
SBSTIX3	2" x 1/2" x 3/4" x 8' Trapezoid	400
SBSTIX6	2-3/4" x 2" x 3/4" x 8' Trapezoid	400
SBSTIX9	1-1/2" x 3/4" x 8' Triangle	560

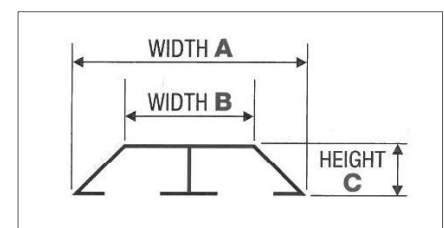

Bar Support

H Chair

Lightweight plastic supports for reinforcing steel within concrete.

H Chair	
Part No.	Description
SBSH100	H Chair 1"
SBSH150	H Chair 1-1/2"
SBSH200	H Chair 2"
SBSH250	H Chair 2-1/2"
SBSH300	H Chair 3"
SBSH350	H Chair 3-1/2"
SBSH400	H Chair 4"
SBSH450	H Chair 4-1/2"
SBSH500	H Chair 5"
SBSH550	H Chair 5-1/2"
SBSH600	H Chair 6"



H Chair

Uni Chair with Ring

Straddle lower level rebar and support upper mats in tilt-up panels.

Uni Chair wRing	
Part No.	Description
SBUC6-6.5R	Uni Chair 6:6-1/2" wRing
SBUC7-7.5R	Uni Chair 7:7-1/2" wRing
SBUC8-8.5R	Uni Chair 8:8-1/2" wRing
SBUC9-9.5R	Uni Chair 9:9-1/2" wRing



Uni Chair

Slab-On-Grade Chair

Integrated sand plate for support and stability on soft surfaces.

Slab-On-Grade Chair	
Part No.	Description
SBPCC1112	Slab-On-Grade Chair 1:1-1/2"
SBPCC2212	Slab-On-Grade Chair 2:2-1/2"
SBPCC3312	Slab-On-Grade Chair 3:3-1/2"
SBPCC4412	Slab-On-Grade Chair 4:4-1/2"




Slab-On-Grade Chair

Slab Bolster

Plastic slab bolster with end lock for connecting longer lengths and secure fit.


Plastic Slab Bolster (5' length)	
Part No.	Description
SBSB34AP	Slab Bolster 3/4" Plastic
SBSB1AP	Slab Bolster 1" Plastic
SBSB112AP	Slab Bolster 1-1/2" Plastic
SBSB2AP	Slab Bolster 2" Plastic

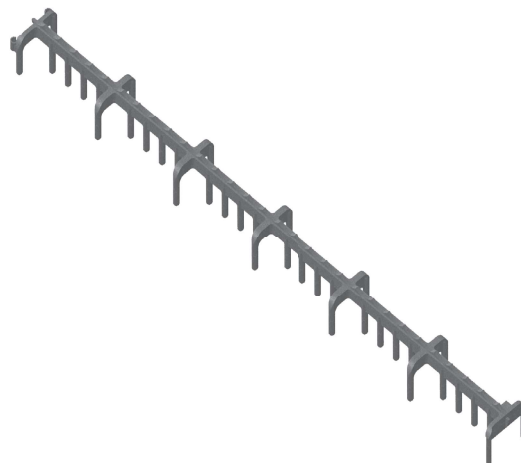

Patch Caps

Patch caps are used to cover the lifting and bracing insert holes.

Patch Caps	
Part No.	Description
SBRLPC22KP	Patch Cap (5/8" Square Insert)
SBPATCHCAPBI	Patch Cap (3/4" Brace Insert)

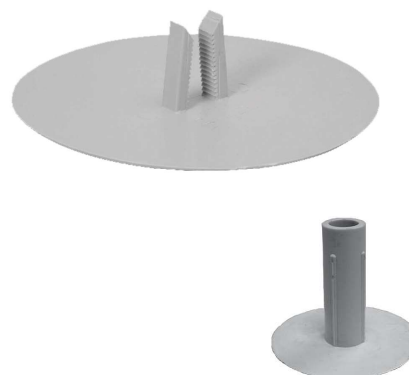

Shims

Shims provide quick adjustment when installing panels on slightly uneven footings. The shims are formed with a corrugated face that prevents them from sliding across each other when stacked.

Each pack contains six 4"x6" shims with an overall thickness of 1-1/16". The pack contains three 1/4" black shims, two 1/8" blue shims and one 1/16" white shim made with HIPS material (8,000 psi minimum).

Patch Caps	
Part No.	Description
SBSHIMPK	Shim Pack Set (6 pcs)



Slab Protector

Slab Protectors are a great way to protect concrete floors when installing tilt-up panels. Slab Protectors are made from rigid, durable PVC and prevent damage to new floors.

Eliminates Repair - Slab Protector saves your floors from damage. Crews won't spend valuable time and money repairing scratched or damaged floors.


Improves Quality - Crews using Slab Protector can walk away from completed concrete floors with pride.

Protects Floor - Slab Protector remains in place along the edge of the panel to protect concrete floors from damage during handling.


Slab Protector	
Part No.	Description
SBSEP24	Slab Protector 24"

Installation:

1. Fasten two Slab Protectors, one in each corner, along the bottom edge of the form.
2. If the width is greater than 20 feet, then fasten another Slab Protector at the center.
3. Place and vibrate concrete, making the Slab Protector an integral part of the panel.
4. Strip the forms to expose the plastic edges of the Slab Protector.
5. Use the plastic edges to protect the concrete when handling and moving panels.

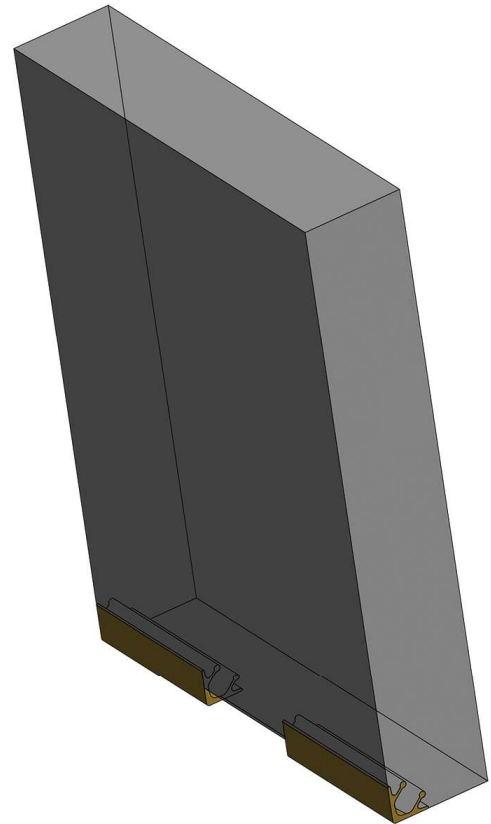

The integral plastic edge protects the concrete when handling and moving tilt-up panels.

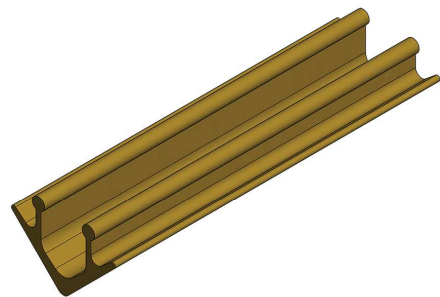

Wire Truss

A “sandwich” panel consists of a bottom layer of concrete, a middle layer of insulation, and a top layer of concrete. The Wire Truss connects these layers into a single, composite unit that is far more energy-efficient than a solid, concrete-only panel.

Wire Truss has the resiliency to expand and contract with the independent thermal-induced movements of the inner and outer concrete layers. This maintains the integrity of the panel and minimizes any thermal transfer between layers. The design of the concrete and insulation layers establishes the overall panel thickness and truss spacing.

Wire Truss	
Part No.	Description
SBWT610M	Wire Truss 6"x10'
SBWT710M	Wire Truss 7"x10'
SBWT810M	Wire Truss 8"x10'
SBWT910M	Wire Truss 9"x10'





FRP Fiber Reinforced Polymer Truss

The truss develops strength and rigidity from a fiber-reinforced design. Two parallel rods are attached top and bottom to a zigzag rod with plastic connectors at every intersection. Foam insulation is placed between lengths of truss, connecting the top and bottom concrete.

The fiber-reinforced material improves the thermal efficiency of “sandwich” panels and reduces cold bridging. The truss shape provides composite action between the top and bottom concrete, supporting all working loads, including stripping, handling and installing tilt-up panels. FRP Truss calculator available for design assistance.

Basalt Truss			
Part No.	Description	X	Y
SBBT710	Basalt Truss 7"x10'	7"	9"
SBBT810	Basalt Truss 8"x10'	8"	10"
SBBT910	Basalt Truss 9"x10'	9"	11"

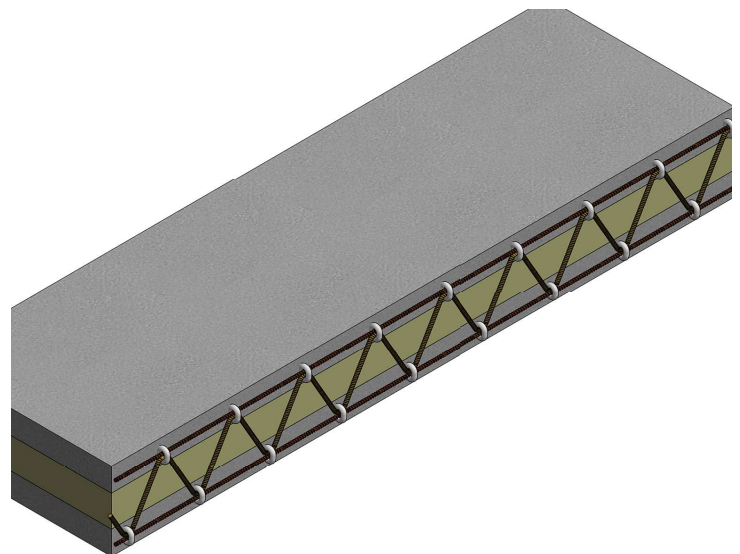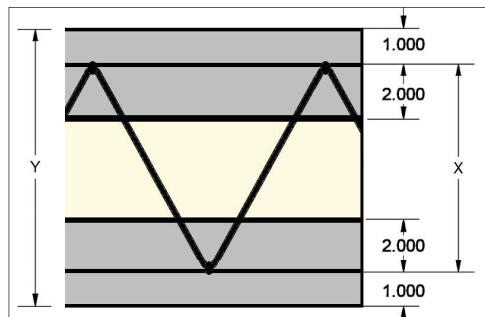

Contact SureBuilt Engineering for assistance.

Brace Spacing Bid Chart

Brace Specifications* (see notes)										
	SBPB417	SBPB422	SBPB427	SBPB432	SBPB51232	SBMR326	SBMR326	SBPB51237	SBMR376	SBMR376
	17'-0" Fixed	22'-0" Fixed	22'-0" Fixed w/5' Ext	22'-0" Fixed w/10' Ext	32'-0" Fixed	32'-0" Modular w/SBI	32'-0" Modular w/DBI	32'-0" Fixed w/5' Ext	37'-0" Modular w/SBI	37'-0" Modular w/DBI
Pipe diameter	4 in	4 in	4 in	4 in	5-1/2 in	6-5/8 in	6-5/8 in	5-1/2 in	6-5/8 in	6-5/8 in
Total length	17 ft	22 ft	27 ft	32 ft	32 ft	32 ft	32 ft	37 ft	37 ft	37 ft
Ultimate load*	9,750 lbs	9,750 lbs	7,200 lbs	5,400 lbs	13,500 lbs	15,000 lbs	25,250 lbs	12,000 lbs	15,000 lbs	22,000 lbs
B/Panel	15.93	20.02	24.12	28.21	28.21	28.21	28.21	32.31	32.31	32.31
Max height	26.54	33.37	40.20	47.02	47.02	47.02	47.02	53.85	53.85	53.85
Brace @ 50	15.02	18.85	22.68	26.51	26.51	26.51	26.51	30.34	30.34	30.34
Min height	17.023	20.85	24.68	28.51	28.51	28.51	28.51	32.34	32.34	32.34

* Ultimate load based on shoe and brace only.

Brace Spacing* in Feet (see notes)										
	SBPB417	SBPB422	SBPB427	SBPB432	SBPB51232	SBMR326	SBMR326	SBPB51237	SBMR376	SBMR376
	17'-0" Fixed	22'-0" Fixed	22'-0" Fixed w/5' Ext	22'-0" Fixed w/10' Ext	32'-0" Fixed	32'-0" Modular w/SBI	32'-0" Modular w/DBI	32'-0" Fixed w/5' Ext	37'-0" Modular w/SBI	37'-0" Modular w/DBI
85' height										
80' height										
75' height										
70' height										
65' height										
60' height										
55' height										
50' height								7.09	8.87	13.01
45' height				3.55	8.88	9.87	16.61	9.04	11.30	16.57
40' height			5.30	4.65	11.63	12.93	21.76	11.84	14.80	21.71
35' height			7.20	6.32	15.79	17.55	29.53	16.07	20.09	29.47
30' height		11.49	10.22	8.97	22.43	24.92	41.95			
25' height	13.97	17.56	15.62							
20' height	23.42									

* Calculations based on solid panels with 80 mph wind speed in worst condition.

Bid Spacing Chart Assumes:


1. Minimum 20 foot wide panel. Minimum of two braces per panel. Round up to next integer.
 2. Assumes two feet below finished floor. Different floor dimension may change spacing and height limits.
 3. Brace bolt or concrete slab may be limiting factor for spacing and capacity.
- Contact SureBuilt -Tampa if further assistance is necessary (813) 606-5727

Brace Specifications* (see notes)									
SBPB51242	SBMR426	SBMR426	SBMR428	SBMR428	SBPB51252	SBMR528	SBMR528	SBMR628	SBMR628
32'-0" Fixed w/10' Ext	42'-0" Modular w/SBI	42'-0" Modular w/DBI	42'-0" Modular w/SBI	42'-0" Modular w/DBI	32'-0" Fixed w/20' Ext	52'-0" Modular w/SBI	52'-0" Modular w/DBI	62'-0" Modular w/SBI	62'-0" Modular w/DBI
5-1/2 in	6-5/8 in	6-5/8 in	8-5/8 in	8-5/8 in	5-1/2 in	8-5/8 in	8-5/8 in	8-5/8 in	8-5/8 in
42 ft	42 ft	42 ft	42 ft	42 ft	52 ft	52 ft	52 ft	62 ft	62 ft
8,040 lbs	14,440 lbs	14,440 lbs	15,000 lbs	25,250 lbs	5,775 lbs	15,000 lbs	19,850 lbs	14,440 lbs	14,440 lbs
36.40	36.40	36.40	36.40	36.40	44.60	44.60	44.60	52.79	52.79
60.67	60.67	60.67	60.67	60.67	74.33	74.33	74.33	87.98	87.98
34.17	34.17	34.17	34.17	34.17	41.83	41.83	41.83	49.49	49.49
36.17	36.17	36.17	36.17	36.17	43.83	43.83	43.83	51.49	51.49

Brace Spacing* in Feet (see notes)									
SBPB51242	SBMR426	SBMR426	SBMR428	SBMR428	SBPB51252	SBMR528	SBMR528	SBMR628	SBMR628
32'-0" Fixed w/10' Ext	42'-0" Modular w/SBI	42'-0" Modular w/DBI	42'-0" Modular w/SBI	42'-0" Modular w/DBI	32'-0" Fixed w/20' Ext	52'-0" Modular w/SBI	52'-0" Modular w/DBI	62'-0" Modular w/SBI	62'-0" Modular w/DBI
								4.17	4.17
								4.77	4.77
								5.54	5.54
					2.19	5.70	7.54	6.49	6.49
					2.60	6.75	8.93	7.69	7.69
3.54	6.36	6.36	6.61	11.13	3.12	8.10	10.72	9.23	9.23
4.32	7.75	7.75	8.05	13.56	3.80	9.87	13.06	11.24	11.24
5.36	9.62	9.62	9.99	16.82	4.71	12.24	16.20		
6.83	12.26	12.26	12.73	21.43	6.01	15.60	20.64		
8.94	16.06	16.06	16.68	28.08					

Bracing Guidelines

1. Do not skew braces more than 5%. See figure on right.
2. Locate brace inserts 1 foot or more from all concrete edges and floor slab joints, otherwise brace may interfere with rigging.
3. Locate brace inserts to provide clearance between the lifting hardware and braces.
4. Locate brace inserts symmetrically about the panel's center line when possible.
5. Locate the first brace insert from each end of the panel at a distance no greater than 25 percent of the panel's width or 10 feet, whichever is less.
6. Consider tributary widths when checking capacity on braces.
7. Brace inserts should not be placed lower than 60% of the panel's height and not less than 5% of the panel's height above the panel's geometric centroid or mass center of gravity, whichever is greater.
8. Brace angle shall not exceed 60 degrees. At angles higher than 60 degrees, panel weight may start bearing on brace.

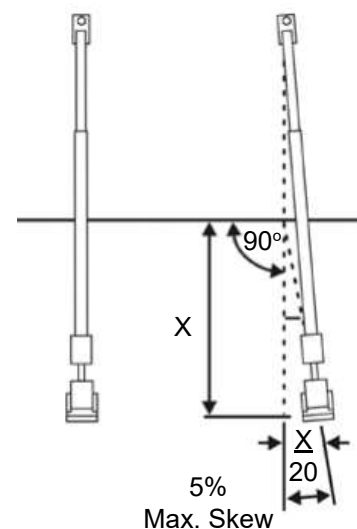

Coatings and Finishes

Products manufactured by SureBuilt Concrete Forms & Accessories can be supplied in several different coatings or finishes to meet specific corrosion requirements. Whenever the coating or finish is not specified, the standard Plain product will be supplied.

Plain

Uncoated steel, commonly referred to as Plain, Black, Basic or Raw, will corrode when exposed to the environment on project sites.

Mechanical Plating

An effective means of applying zinc, tin, or other ductile metals or mixtures of ductile metals to metal substrates - usually steel. In the mechanical plating process, impact energy is transferred from a rotating open - ended oblique barrel through glass beads, resulting in the cold-welding of fine metal dust particles to the substrate. The resulting deposit is slightly porous, matte in finish, and provides corrosion protection to the articles so plated without introducing hydrogen embrittlement into the part. It is used widely to provide corrosion protection.

Electroplating

Can be a bright shiny or sometimes dull zinc finish, generally .0002 to .001 inches thick. Degree of corrosion protection will vary and is often dependent on the severity of the particular environment.

Hot-Dip Galvanizing

Semi-bright to a very dull finish, much heavier coating than the Electroplating process. HDG provides a higher degree of corrosion protection than the Electroplate, but is not suitable for threaded products or any tight fitting items. High carbon steels are not suitable for HDG.

Epoxy Coating

A slick, shiny epoxy coating applied to a finished product by means of the electrostatic or fluidized bed method. Coating thickness will vary from .005 inches to .012 inches. Epoxy coatings provide very effective corrosion protection in hostile environments such as around or over salt water, or high chemical contaminated areas.



Guarding Against Embrittlement

Carbon steels, cold-worked steels, heat-treated steels are susceptible to embrittlement in electroplating operations, from either or both the cleaning/pickling or coating process. Any steel having been severely cold-worked must be stress-relieved before baking and prior to either electroplating or HDG.

Any steel of significant high-strength or high-carbon susceptible to hydrogen embrittlement during the electroplating or HDG process must be baked before the coating process is started to drive out excess hydrogen. Some items are not suitable for HDG because of the material properties. Contact SureBuilt Technical Service for further information.

Warnings

- | | |
|----------------|--|
| Warning | <p>Always follow instructions of product manufacturers.</p> <p>Various construction products are specified within these drawings. These products shall be used in complete accordance with the product manufacturer's instructions. Failure to do so may result in property damage, injury or death.</p> |
| Warning | <p>Do not substitute products or interchange components from different manufacturers.</p> <p>Substituted products may not have the same load carrying capacity or functionality as those specified. Product components from different manufacturers may not be compatible, causing product malfunction and/or a reduction in the products load carrying capacity. Either case may result in an unexpected failure of the product, resulting in possible property damage, injury or death.</p> |
| Warning | <p>Do not use damaged or worn products and equipment.</p> <p>All construction products, equipment, hardware and braces shall be inspected for damage and wear prior to use. Damaged or worn items shall not be used as malfunction and/or reduced load carrying capacity could result in unexpected failure causing possible property damage, injury, or death.</p> |
| Warning | <p>Stay clear of tilt-up panels during erection.</p> <p>Do not get beneath panels. Do not ride or climb on panels. Stay clear of panel fall zones. Failure to do so may result in property damage, injury, or death.</p> |
| Warning | <p>Do not alter rigging, reinforcing steel or strongbacks.</p> <p>Altering the rigging can change the applied lift insert loads, panel stresses and overall behavior of the panel during erection. Altering or omitting reinforcing steel or strongbacks can cause cracking or complete panel collapse during erection. Both can lead to property damage, severe injury or death.</p> |
| Warning | <p>Follow all OSHA Standards and other applicable safety standards.</p> <p>Pay particular attention to OSHA 1926(b)(1) through (2), 1926.21(b)(2) and 1926.704; and PCI Erection Safety Manual (MNL 132). Failure to do so may result in property damage, injury, or death.</p> |
| Warning | <p>Do not deviate from the information shown on the drawings without notifying and obtaining approval from Surebuilt Engineering Services.</p> |

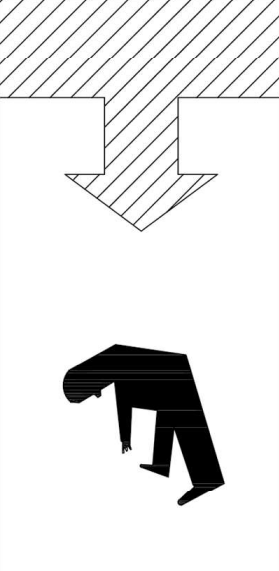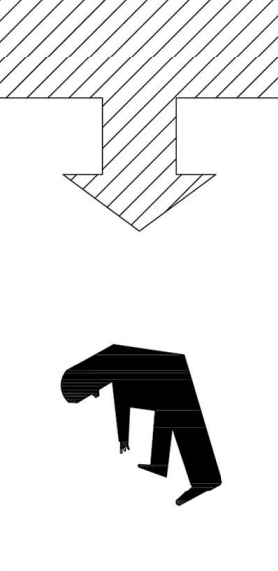	<p>DANGER</p> <p>Falling Panels, bracing or hardware can cause property damage, severe injury or death.</p> <p>Read all instructions and notes contained within this tilt-up construction drawings booklet. All information should be clearly understood by all job site personnel involved in the construction and erection process prior to proceeding with construction. If anyone is unclear as to the intent of the drawings or notes, contact Surebuilt Engineering Services for clarification.</p> <p>Failure to follow all instructions and warnings contained herein, may result in exposure of workers and other personnel in the area of the job site to unsafe conditions or hazards that can cause property damage, severe injury or death.</p>	
---	---	---

Bar Support – Wire slab bolsters and high chairs, with optional epoxy-coat, plastic-dip, plastic-tip or plate, to meet almost any slab requirement.

Bridge Deck – Overhang brackets and hangers provide an efficient deck forming solution for precast concrete or steel I-beam bridge structures.

Coil Ties – 2-Strut and 4-Strut designs, in standard and heavy-duty capacities, with optional cones, waterseals or custom combination, for job-built forming.

Dowels – Plates, sleeves, baskets and joint nosings for high-performance concrete floors.

Euro Rod – 15mm and 20mm taper ties, she-bolts, inner ties, washers and wing nuts compatible with European-brand forming systems.

Metal Rib – Leave-in-place, expanded galvanized mesh to form footings, bulkheads, grade beams, pier caps and blindside walls.

Pipe Braces – Contractor-preferred braces, with rated capacities and lengths ranging from 7'6" to 62'6", for almost any forming application.

Precast – Inserts, anchors, connectors and lifting systems for efficient precast concrete production.

Self-Riser – Integrated hydraulic system for multi-story building cores that virtually eliminates crane time.

Shoring – A conventional 12K load/leg system, with base plates, cross braces, screw jacks and U-heads, for productive deck support.

Snap Ties – Ties and brackets, with $\frac{3}{4}$ " plywood and 2x4 lumber, create a simple and effective plywood forming system.

Staybox – A pre-engineered and pre-assembled rebar keyway that simplifies forming at wall and deck intersections.

Stud Rail – A reinforced column-to-deck connection that reduces shearing, transfers load further into the slab and eliminates column capitals.

SurePly™ – An industry-recognized handset system, with more than 80 standard panel and filler sizes, for almost any forming application.

Tilt-Up – A start-to-finish system of lifting inserts, plates and hardware for tilt-up panel construction.

Walers – Double channel walers align panels, carry taper tie loads and maximize the surface area of almost any gang.